


N67 19959	(ACCESSION NUMBER)	102	(PAGES)
102	(THRU)	12	(CODE)
CB-828/15			
(NASA CR OR TMX OR AD NUMBER)			

ACQUISITION FORM 602

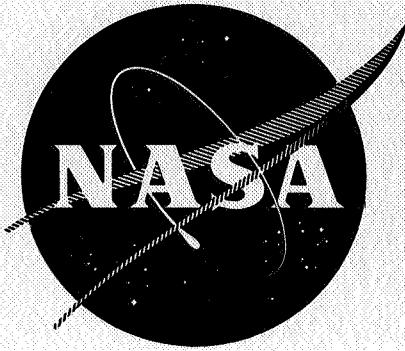

GENERATION OF LONG TIME CREEP DATA ON REFRACTORY ALLOYS AT ELEVATED TEMPERATURES

THIRTEENTH QUARTERLY REPORT

Prepared for
NATIONAL AERONAUTICS AND SPACE ADMINISTRATION
LEWIS RESEARCH CENTER
UNDER CONTRACT NAS 3-2545

TRW EQUIPMENT LABORATORIES
CLEVELAND, OHIO

NOTICE

This report was prepared as an account of Government sponsored work. Neither the United States, nor the National Aeronautics and Space Administration (NASA), nor any person acting on behalf of NASA:

- A.) Makes any warranty or representation, expressed or implied, with respect to the accuracy, completeness, or usefulness of the information contained in this report, or that the use of any information, apparatus, method, or process disclosed in this report may not infringe privately owned rights; or**
- B.) Assumes any liabilities with respect to the use of, or for damages resulting from the use of any information, apparatus, method or process disclosed in this report.**

As used above, "person acting on behalf of NASA" includes any employee or contractor of NASA, or employee of such contractor, to the extent that such employee or contractor of NASA, or employee or such contractor prepares, disseminates, or provides access to, any information pursuant to his employment or contract with NASA, or his employment with such contractor.

Request for copies of this report should be referred to

**National Aeronautics and Space Administration
Office of Scientific and Technical Information
Attention: AFSS-A
Washington, D. C. 20546**

TRW EQUIPMENT LABORATORIES

THIRTEENTH QUARTERLY REPORT

for

26 July 1966 to 26 September 1966

GENERATION OF LONG TIME CREEP DATA
OF REFRACTORY ALLOYS AT ELEVATED TEMPERATURES

Prepared by:

J. C. Sawyer and E. A. Steigerwald

Prepared for:

National Aeronautics and Space Administration
Contract No. NAS 3-2545

Technical Management:

Paul E. Moorhead
NASA - Lewis Research Center
Space and Power Systems

14 October 1966

Materials Research and Development Department
TRW Equipment Laboratories
TRW Inc.
23555 Euclid Avenue
Cleveland, Ohio 44117

TRW EQUIPMENT LABORATORIES

FOREWORD

The work described herein is being performed by TRW Inc. under the sponsorship of the National Aeronautics and Space Administration under Contract NAS 3-2545. The purpose of this study is to obtain design creep data on refractory metal alloys for use in advanced space power systems.

The program is administered for TRW Inc. by E. A. Steigerwald, Program Manager. J. C. Sawyer is the Principal Investigator, and R. R. Ebert contributed to the program. The NASA technical director is Paul E. Moorhead

Prepared by J. C. Sawyer
J. C. Sawyer
Principal Engineer

Approved by E. A. Steigerwald
E. A. Steigerwald
Section Manager

Approved by G. J. Guarnieri
G. J. Guarnieri
Manager, Materials
Research & Development

TRW EQUIPMENT LABORATORIES

TABLE OF CONTENTS

	<u>Page No.</u>
I INTRODUCTION.	1
II MATERIALS AND PROCEDURE.	1
III RESULTS AND DISCUSSION.	5
Molybdenum Base Alloys	5
Tantalum Base Alloys	18
Vapor Deposited Tungsten.	22
IV THERMOCOUPLE DRIFT DATA	22
V VACUUM CHAMBER RESIDUAL GAS ANALYSIS	30
VI BIBLIOGRAPHY.	34
VII APPENDIX I	35

I INTRODUCTION

Space electric power systems depend upon the use of refractory metals in a variety of component areas. A critical property parameter in the design of these systems is the long-time creep strength at very low pressures and elevated temperatures. Since oxygen contamination of refractory metal alloys can occur under conditions of 1×10^{-6} Torr, vacuums better than 1×10^{-8} Torr must be used to obtain meaningful creep measurements which can be employed in the design of space components. The initial work of this program was to generate 1000 hour creep data on selected refractory alloys which have potential use in advanced power systems. These alloys are in the form of rolled sheet and forged plate with the former being considered as representative of material for cladding and tubing applications and the latter for turbine components. Following the initial evaluation, primary emphasis has been placed on providing long-time (10,000 hour) creep design data for the tantalum-base alloy T-111 and the molybdenum-base TZC and TZM.

This report presents creep data for vapor-deposited tungsten, TZC, TZM, and T-111.

II MATERIALS AND PROCEDURE

The compositions of the various alloys which have been or are being tested are presented in Table 1 while the material form, the range of test temperatures, and heat treatment are given in Table 2. A detailed review of the processing history of the alloys under evaluation was presented in the Ninth Quarterly Report, NASA-CR-54772.

In the current series of tests, vapor-deposited tungsten is being evaluated as 1/8" diameter bar machined from the wall of vapor-deposited tubing.

TRW EQUIPMENT LABORATORIES

TABLE 1
Chemical Composition of Alloys Being Evaluated in Creep Program (Weight %) (1)

Material	W	Re	Cb	Mo	Ta	Hf	G	N ₂	Ti	Zr	NH	ppm	O ₂	H ₂
Tungsten (Vapor Deposited) (General Atomics)	Bal.						.0012					12-14	1-3	
Tungsten (Arc-melted)	Bal.						.0058					9	4	
Tungsten-25% Rhenium (Arc-melted)	Bal.	24.9					.0050					50	1.4	
Sylvania A	Bal.						0.52	.030				20	3	
TZM (Heat 7502) (Heat 7463) (Heat KDTZM-1175)	Bal.		Bal.	Bal.	Bal.	Bal.	.013 .016 .031 (.024)(2)	.011 .0003 .0043 (.49)(2)	.47 .48 .61 (.49)(2)	.091 .080 .12 (.144)(2)		20	7	
CB Modified TZM (Heat 4305-4)	1.62 (1.00)		Bal.				.06 (.015)	.50 (.48)	.32 (.095)				(4) (4)(1)	
TZC (Heat M-80) (Heat M-91) (Heat 4345)	Bal.		Bal.	Bal.	Bal.	Bal.	.140 .145 .13	.0018 .003 .17	1.02 1.17 1.24	.130 .274 .15		41 37 10		
AS-30	21.0		Bal.				.090	.010	.03	1.04	.02	60	15	
Cb132M	15.6		Bal.	4.73	19.5		.150	.002		2.40		4	2	
T-222	9.57				Bal.			.012				35	11(3)	
T-111 (Heat 70616) (Heat D-1670) (Heat 1102) (Heat 65079)	8.5 7.9 Not Received Not Received				Bal. Bal. 2.17-2.44	2.30 .004 .001						55 72 72	6 5	

- (1) - TRW Analysis
 (2) - AIRE Research Analysis
 (3) - Originally ST-222 plate, program plan revised and plate rolled to make T-222 sheet.
 (4) - Climax Analysis

TABLE 2
Summary of Material Variables Being Evaluated in the Creep Program

Material	Form	Test Temperature	Test Condition
Tungsten	Arc-Melted 0.030" Sheet	3200°F (1760°C) 2800°F (1538°C)	Recrystallized 1-2 hours, 3200°F (1760°C) Recrystallized 1 hour, 2800°F (1538°C)
Tungsten-25% Rhenium	Arc-Melted 0.030" Sheet	3200°F (1760°C)	Recrystallized 1-2 hours, 3200°F (1760°C)
Sylvania A	Powder Metallurgy 0.030" Sheet	3200°F (1760°C)	Recrystallized 1-2 hours, 3200°F (1760°C)
Tungsten	Vapor-Deposited 1/8" Dia. Bars	3200°F (1760°C) 2800°F (1538°C)	Anneal 1 hour, 3200°F (1760°C) Anneal 1 hour, 2800°F (1538°C)
AS-30	3/4" Plate	2000-2200°F (1093-1204°C)	As-Received (stress-relieved condition)
Cb132M	3/4" Plate	2056-2256°F (1124-1235°C)	Annealed 1 hour, 3092°F (1700°C)
TZM (Heat #463)	5/8" Diameter Bar	2000°F (1093°C)	Stress relieved 2250°F (1232°C), 1/2 hour
TZM (Climax Heat 7502)	"Pancake" Forging	2000°F (1093°C)	(Cond. 1) As-received (stress-relieved condition)(Cond. 2) Annealed 1 hour, 2850°F (1566°C)
TZM Heat KDTZM-1175 (AiResearch)	"Pancake" Forging	1600-1856°F (871-1013°C)	As-received (stress relieved 2300°F (1260°C), 1 hour)
CB Modified TZM Heat 4305-4	5/8" Diameter Bar	1800-2200°F (982-1204°C)	Stress -relieved 2500°F (1371°C), 1 hour
TZC (Heat M-80)	3/4" Plate	1800-2200°F (982-1204°C)	Several test conditions
TZC (Heat M-91)			
T-222*	0.030" Sheet	2056-2200°F (1124-1204°C)	Recrystallized 2800°F (1538°C) and 3000°F (1649°C), 1 hour
T-111 (Heat 70616) (Heat D-1670)	0.030" Sheet	1800-2200°F (982-1204°C)	Recrystallized 2600°F (1426°C) and 3000°F (1649°C), 1 hour

* Originally scheduled to be tested as ST-222 plate material, program plan revised to include materials as T-222 grade applicable for tubing.

TRW EQUIPMENT LABORATORIES

The TZM alloy was obtained from three different sources. One lot of material, designated as Heat 7502, was purchased from Climax Molybdenum of Michigan in the form of disc forgings approximately 11 inches in diameter, while a second lot of material (Heat KDTZM-1175) consisted of a section of a disc forging obtained from AiResearch. The latter material was processed by Universal Cyclops to produce improved creep resistance (1)* through the development of a fine carbide dispersion. In order to produce this effect it is necessary to work with a carbon level above 0.02%. Climax commercial TZM bar (Heat 7463) has been included in the studies as a means of determining the influence of material form on the creep properties.

To date two different heats of TZC have been tested. These heats (M-80 and M-91) obtained from the same vendor, represent a difference in processing treatment. Heat M-80 involved finishing a 2" x 4" sheet bar by rolling at 2925°F (1585°C) using small reductions per pass (approximately 4%). In contrast M-91 employed a finishing temperature of 2372°F (1300°C) and a relatively large degree of deformation per pass. A third lot of TZC (Heat 4345) was prepared by Climax Molybdenum of Michigan by broad forging 3 inch diameter extruded stock. To date this material has not been tested.

Columbium-modified TZM, a relatively new alloy produced by Climax was tested as a swaged 5/8 inch diameter bar.

Four heats of the T-111 alloy were obtained from two different sources. Two heats were produced by Wah Chang (Heat 70616 and Heat 65079) and two were obtained from Fansteel (Heat D-1670 and Heat 1102). All heats are being evaluated after recrystallization for one hour at 3000°F (1649°C).

The creep-test procedure involved obtaining a vacuum of 5×10^{-10} Torr or better at room temperature, then heating the specimen at a rate so that the pressure never went above 1×10^{-6} Torr. Heat treatment was performed on the materials in situ, prior to load application. After heat treatment the specimens were cooled to 600°F or lower and then reheated to the test temperature which was maintained for two hours to insure equilibrium. During testing the vacuum was less than 1×10^{-8} Torr and decreased with test time.

* Numbers in parentheses refer to references in the Bibliography.

TRW EQUIPMENT LABORATORIES

Specimen extension was measured over a two-inch gauge length with an optical extensometer than determined the distance between two scribed reference marks to an accuracy of 50 microinches. The program plan involves testing the plate and forged alloys at temperatures between 1600 and 2250°F (871 and 1235°C) until a 1% total extension is obtained. The tungsten material is being tested at 2800 and 3200°F (1566 and 1760°C) for total extensions between 3 and 5%, while the tantalum base materials are being evaluated in the 1800 to 2600°F (982 to 1427°C) range to an elongation of approximately 2 to 5%. In most cases the applied stress levels have been selected with the goal of obtaining creep data over total test times between 1000 and 20,000 hours.

III RESULTS AND DISCUSSION

The creep tests in progress, completed or initiated during the thirteenth quarter are graphically presented as percent elongation in the two inch gauge section as a function of the time at the applied stress. Reference marks are placed on the curves to indicate the chamber pressure during the course of the test. The numerical creep data for each test in progress during this quarter are given in detail in Appendix I.

Molybdenum-Base Alloys

Both TZC and TZM molybdenum-base alloys are currently under test. The heat treatments summarized in Table 3 were applied to the materials to provide some indication of whether a recrystallized or stress-relieved structure would provide the greatest degree of creep resistance over the test temperature range being evaluated. In cases where the material was stress relieved prior to test, the stress relief temperature was 200 to 500°F (110 to 280°C) above the test temperature.

TABLE 3**Summary of Heat Treatments Used on Molybdenum-Base Alloys Under Test**

Materials	Heat	Treatment
TZC	M-80	Annealed 3092°F (1700°C), 1 Hour
TZC	M-91	Stress Relieved 2300°F (1260°C), 1 Hour
TZC	M-91	Stress Relieved 2500°F (1371°C), 1 Hour
TZC	M-91	Annealed 3092°F (1700°C), 1 Hour
TZM	7502	Stress Relieved 2200°F (1204°C), 1 Hour
TZM	7463	Stress Relieved 2250°F (1232°C), 1/2 Hour
TZM	KDTZM 1175	Stress Relieved 2300°F (1260°C), 1 Hour

The data for the tests of TZC specimens from Heat M-80 are presented in Figure 1. These curves are typified by a region of relatively rapid creep during the first 100-300 hours amounting to an extension of approximately 0.05 to 0.10%. The creep which follows is characterized by a decreasing rate, suggestive of the presence of a strain hardening process.

Four tests of TZC Heat M-91 are being conducted. The creep curves presented in Figure 2 exhibit the general characteristic of a creep rate which constantly decreases with time. A compilation of the Larson-Miller time-temperature parameters to produce 0.5% creep is presented in Table 4 for the various tests on TZC. The results plotted in Figure 3, using a constant of 15, indicate that Heat M-91 in the stress relieved condition provides creep resistance which is superior to that of the same material in the recrystallized condition (compare curves C and D with B). At the lower values of the time-temperature parameter, the 2300°F stress relief produced less creep than the 2500°F treatment (compare curves C and D). A comparison of the results from Heats M-91 and M-80 in the annealed condition indicated that Heat M-80 had superior properties which were comparable to the stress-relieved condition in Heat M-91.

In order to evaluate the influence of processing history on creep resistance, tests under comparable conditions were conducted on TZM material from Heats KDTZM 1175 and 7502 and on Heats 7502 and 7463. The results shown in Figures 4 and 5 indicate that in each series of tests the material with the highest degree of work and room temperature hardness, i.e. the heats KDTZM 1175 and 7463, had the lowest creep rate. Figure 6 compares

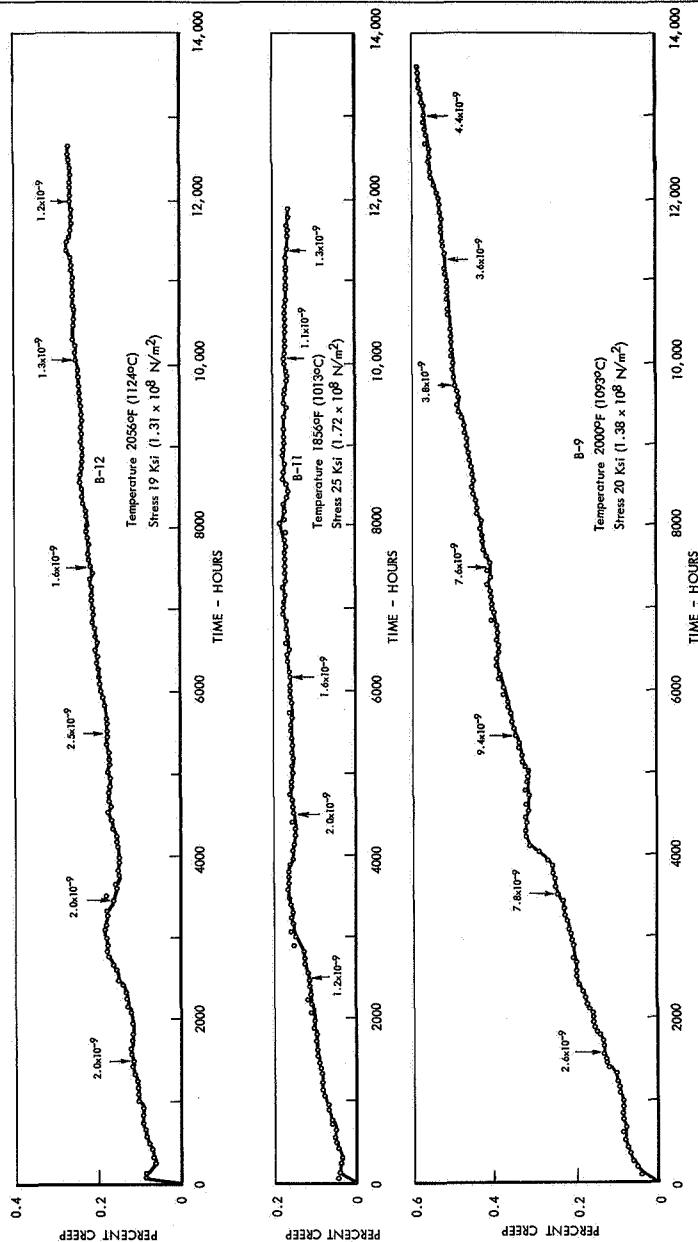


FIGURE 1 CREEP TEST DATA, TZC (HEAT M-80), ANNEALED 3092°F (1700°C) 1 HOUR, TESTED IN VACUUM ENVIRONMENT < 1×10^{-8} TORR.

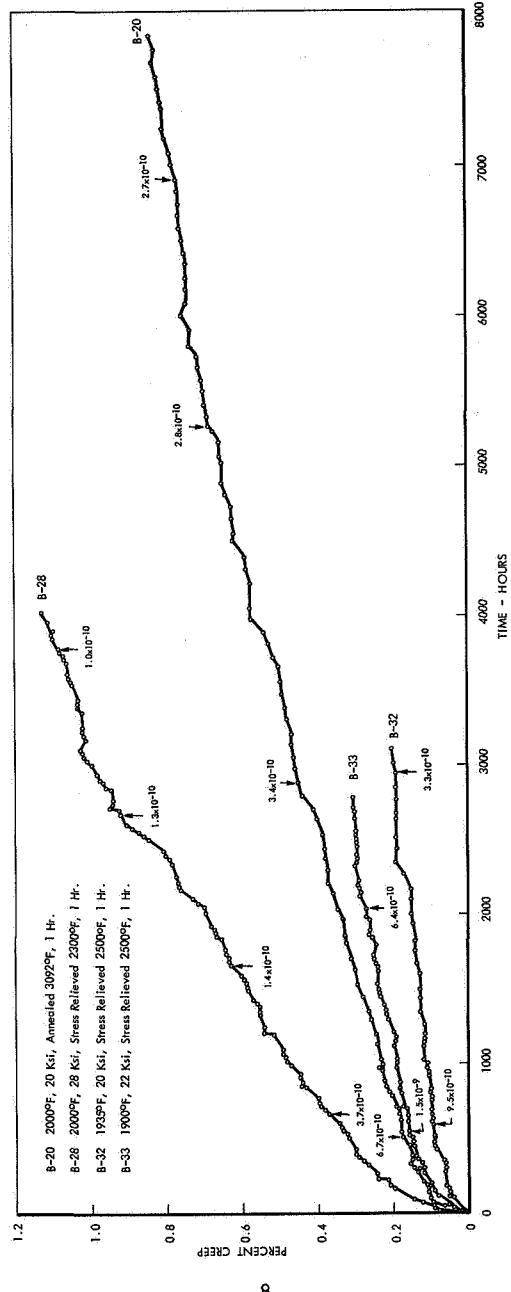


FIGURE 2 CREEP DATA, TZC (HEAT M-91) TESTED IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR

TRW EQUIPMENT LABORATORIES

TABLE 4

0.5% Creep Test Data for TZC Molybdenum-Base Alloy

Specimen No.	Test Temperature °F	Test Temperature °C	Stress Ksi	Stress N/m ² × 10 ⁸	Hours for 0.5% Creep	Larson-Miller T°F(15+logt)×10 ⁻³ for 0.5% Creep
<u>Heat M-80, Annealed 3092°F (1700°C), 1 Hour</u>						
B-8A	2200	1204	18	1.24	1, 100	48.0
B-10	2200	1204	17	1.17	2, 500	49.0
B-9	2000	1093	20	1.38	10, 400	46.8
B-12	2056	1124	19	1.31	46, 000*	49.4
B-11	1856	1013	25	1.72	170, 000*	46.9
<u>Heat M-91, Annealed 3092°F (1700°C), 1 Hour</u>						
B-31	2200	1204	14	0.965	320	46.6
B-20	2000	1093	20	1.38	3, 600	45.6
<u>Heat M-91, Stress Relieved 2300°F (1260°C), 1 Hour</u>						
B-28	2000	1093	28	1.93	1, 100	44.4
B-19	1800	982	44	3.03	1, 075	40.8
<u>Heat M-91, Stress Relieved 2500°F (1371°C), 1 Hour</u>						
B-30	2200	1204	22	1.52	70	44.9
B-32	1935	1057	20	1.38	20, 000*	46.1
B-33	1900	1038	22	1.52	6, 000*	44.3

* Extrapolated Data

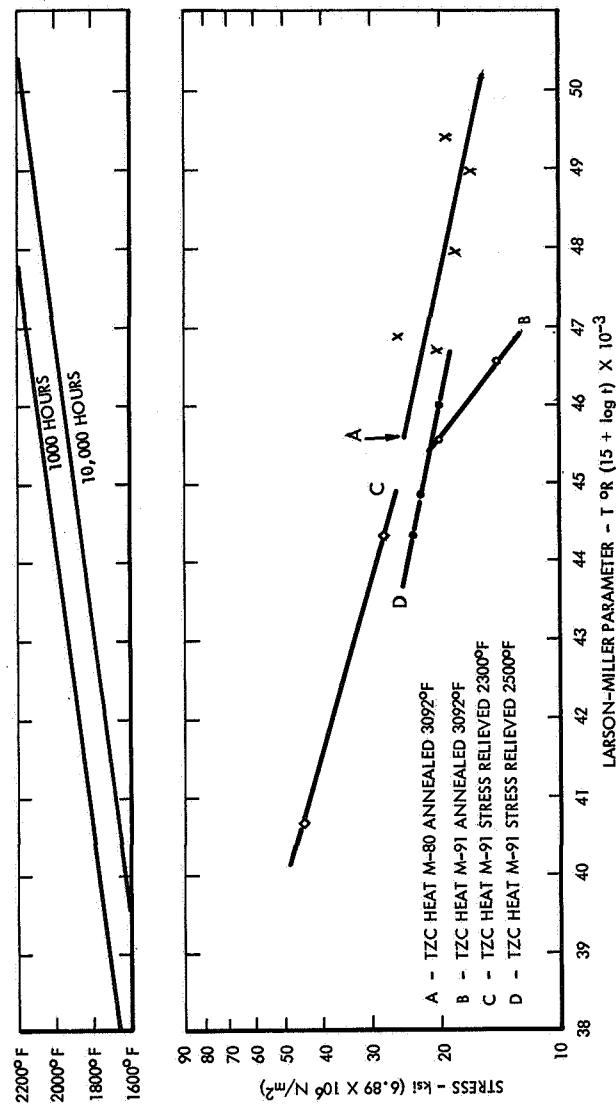


FIGURE 3 LARSON-MILLER PLOT OF DATA FOR 0.5% CREEP IN MOLYBDENUM-BASE TZC ALLOY, TESTED IN VACUUM ENVIRONMENT $<1 \times 10^{-8}$ TORR.

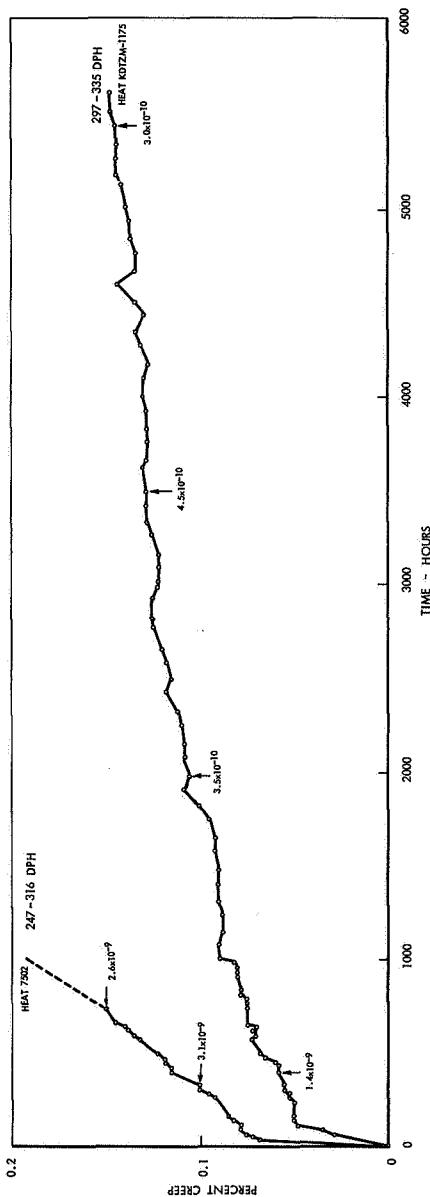


FIGURE 4 CREEP DATA FOR STRESS RELIEVED TZM DISC FORGINGS TESTED AT 1800°F (982°C) AND 44 ksi
($3.03 \times 10^8 \text{ N/m}^2$) IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.



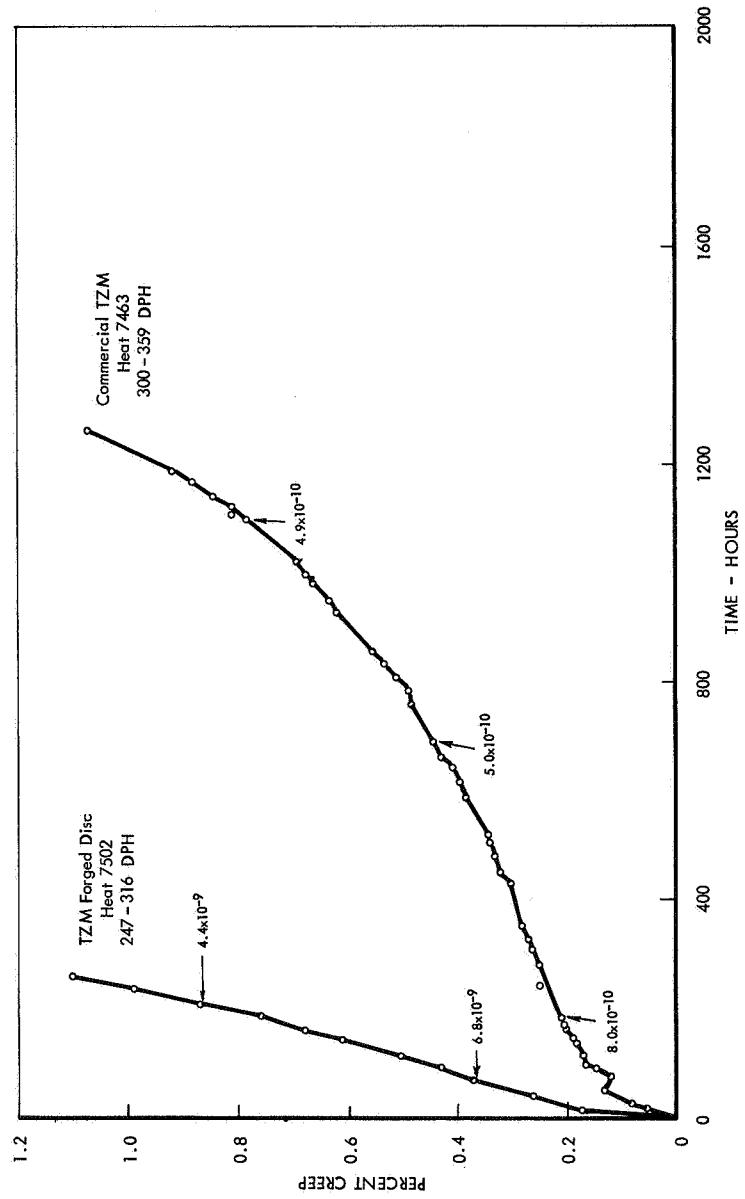


FIGURE 5 CREEP DATA FOR TZM ALLOYS IN STRESS RELIEVED CONDITION. TESTED AT 2000 F (1093°C) AND 41 KSI ($2.82 \times 10^8 \text{ N/m}^2$) IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.

TRW EQUIPMENT LABORATORIES

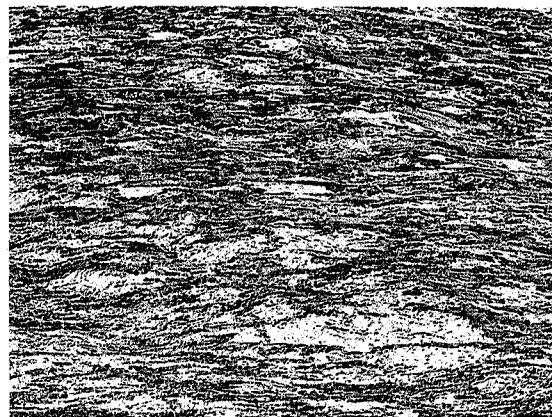

237 DPH TZM DISC HEAT 7502 TEST B-29
TOTAL TEST TIME 664 HRS.

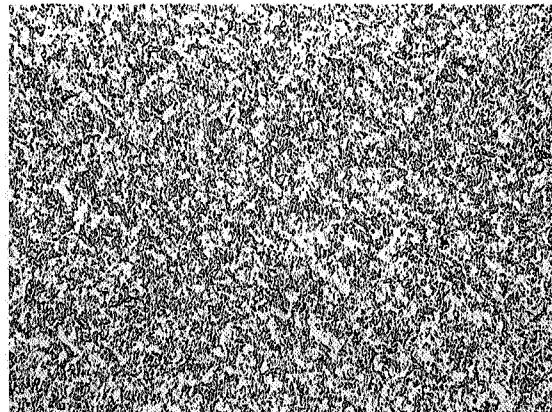

343 DPH TZM BAR HEAT 7463 TEST B-34
TOTAL TEST TIME 1441 HRS.

**FIGURE 6 MICROSTRUCTURE 100X OF SURFACE PERPENDICULAR TO SPECIMEN AXIS
IN GAUGE SECTION. TEST CONDITIONS 2000°F (1093°C) 41 KSI (2.82×10^8 N/m²)
IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR. ETCHANT: 75%, HF.**

the microstructure of the bar stock (Heat 7463) and the forged disc material (Heat 7502) after testing. The surface shown is in the gauge section perpendicular to the axis of the specimen. The bar material exhibits a considerably higher hardness and has an orientation in which the applied stress is parallel to the fibered grains.

The data shown in Table 5 for various TZM alloys is plotted in terms of the Larson-Miller parameter in Figure 7. In this graph the superiority of Heat KDTZM 1175 is evident. The single points for both commercial TZM bar and Cb-Modified TZM bar indicate that these materials are comparable in creep strength to Heat KDTZM 1175 forged material. In addition, the results indicate that the Cb-modified TZM bar does not have a significantly higher creep strength than the conventional TZM bar. As a direct comparison, the data for TZC Heat M-91 stress relieved at 2300°F is plotted with TZM Heat KDTZM 1175 in Figure 8. The superior creep strength of this particular TZM material at the lower values of the Larson-Miller parameter is apparent. At the higher value of the Larson-Miller parameter which corresponds to a test temperature of 1856°F (1013°C), the creep strength of the KDTZM 1175 decreases from the linear relationship possibly due to recovery effects in the worked structure.

It is worthwhile to examine the TZC data accumulated to date to determine whether it conforms to one of the generalized equations for existing creep theory. This theory states, in part, that the steady state creep rate ($\dot{\epsilon}$) is related to the temperature and stress in the following manner:

$$\dot{\epsilon} = A \sigma^n \exp(-Q/RT)$$

where: $\dot{\epsilon}$ = the steady state creep rate
Q = the activation energy of the creep process
T = the absolute temperature
A and n = constants
 σ = stress
R = the gas constant

Specimen B-30, B-32, and B-33 were tested at various loads and temperatures after stress relieving at 2500°F (1371°C). Using the results from these tests, the steady state creep rate was determined at approximately 1000 hours. While it has been previously stated that the creep rate decreases with time for this alloy, the rate of change is so slow that it was considered essentially constant for this exercise. The data available for the solution of the creep equation are as follows:

TRW EQUIPMENT LABORATORIESTABLE 50.5% Creep Test Data for TZM Molybdenum-Base Alloy

Specimen No.	Test Temperature °F	Test Temperature °C	Stress Ksi	Stress N/m ² x 10 ⁸	Hours for 0.5% Creep	Larson-Miller T°F(15+logt)x10 ⁻³ for 0.5% Creep
<u>Heat KDTZM 1175, Stress Relieved 2300°F (1260°C), 1 Hour</u>						
B-21	1600	871	65	4.48	9,600*	39.1
B-18	1600	871	55	3.78	60,000*	40.7
B-25	1800	982	44	3.03	50,000*	44.5
B-16	1855	1013	23.4	1.61	62,500*	45.8
<u>Columbium-Modified TZM, Stress Relieved 2500°F (1371°C), 1 Hour</u>						
B-27	2000	1093	41	2.82	1,080	44.4
<u>Heat 7502, Stress Relieved 2200°F (1204°C), 1 Hour</u>						
B-1	2000	1093	12	0.826	605	43.7
B-3	2000	1093	10	0.689	13,000*	47.0
B-29	2000	1093	41	2.82	100	41.9
B-35	1800	982	44	3.03	3,750*	42.0
<u>Commercial Bar, Heat 7463, Stress Relieved 2250°F (1232°C), 1 Hour</u>						
B-34	2000	1093	41	2.82	790	44.0

*Extrapolated Data

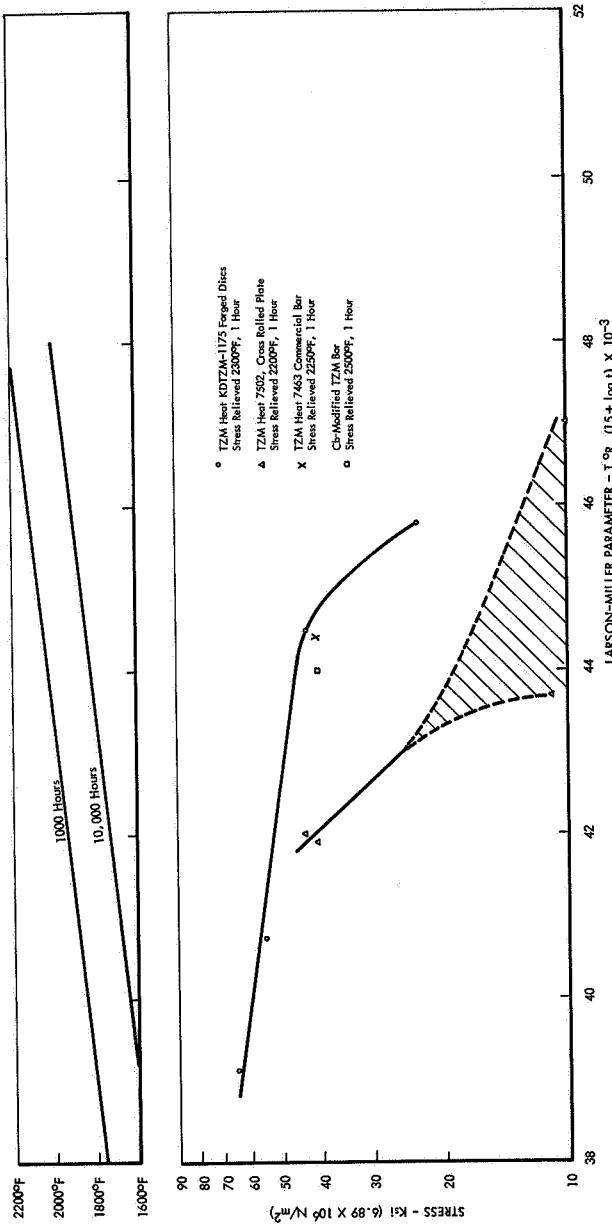
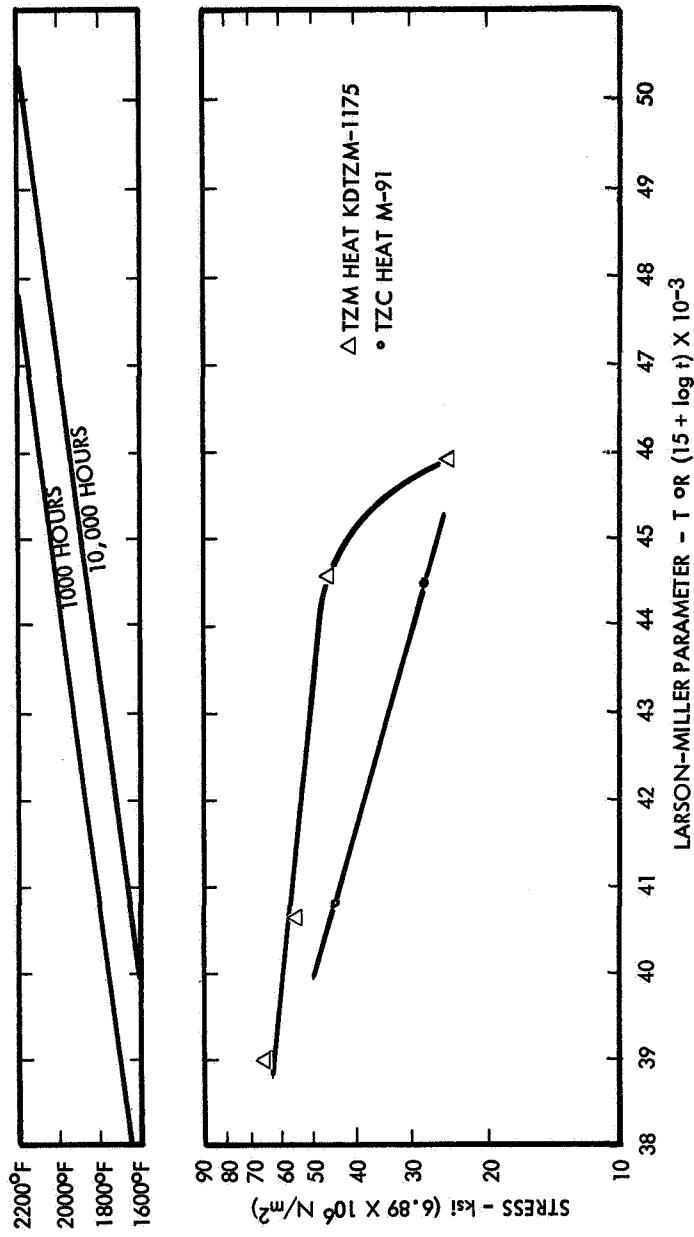


FIGURE 7 LARSON-MILLER PLOT OF DATA FOR 0.5% CREEP IN MOLYBDENUM - BASE TZM ALLOYS, TESTED IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.



**FIGURE 8 LARSON-MILLER PLOT OF DATA FOR 0.5% CREEP IN MOYBDENUM-BASE ALLOYS,
STRESS RELIEVED AT 2300°F (1260°C) AND TESTED IN VACUUM ENVIRONMENT
 $< 1 \times 10^{-8}$ TORR.**

TRW EQUIPMENT LABORATORIES

Specimen	Test Temperature			Stress ksi	Creep Rate % - Hr. ⁻¹
	°F	°C	°K		
B-33	1900	1038	1311	22	7×10^{-5}
B-32	1935	1057	1300	20	3×10^{-5}
B-30	2200	1204	1477	22	4×10^{-3}

The results of the solution show that the apparent activation energy (Q) is $96,000 \text{ cal-mole}^{-1} \cdot \text{K}^{-1}$. This value is in relatively good agreement with $101,000 \text{ cal-mole}^{-1} \cdot \text{K}^{-1}$ obtained from the general rule that the activation energy of diffusion is 35 times T_m where T_m is the melting point of the material (2873°K). Since the difference in stress level was too small, no attempt was made to obtain a measure of the stress exponent n .

While this calculation is rather rudimentary, it is indicative of further data which can be obtained with appropriate selection of creep tests.

Tantalum-Base Alloy T-111

Three different lots of tantalum-base T-111 alloys have been tested to date and the results are summarized in Figures 9 and 10. A characteristic of the creep curves is the upware curvature indicative of an accelerating creep rate. In an effort to determine if any microstructural changes were occurring which could account for this effect, a specimen of T-111 was examined which had been annealed for one hour at 3000°F (1649°C) and tested at 2200°F (1204°C) to give 6.55% creep in 3840 hours. The structure of this specimen, shown in Figure 11, suggested the formation of small voids in the grain boundary, or as suggested by Titran and Hall (2) the formation of a second unidentified phase. As a means of further investigation, specimen S-19, annealed 1 hour at 3000°F and tested at 2200°F and 8 ksi to 3.4% creep was examined with an electron microprobe. The results show the presence of unidentified particles containing a high concentration of hafnium. Similar particles were not found in samples having less extension.

TRW EQUIPMENT LABORATORIES

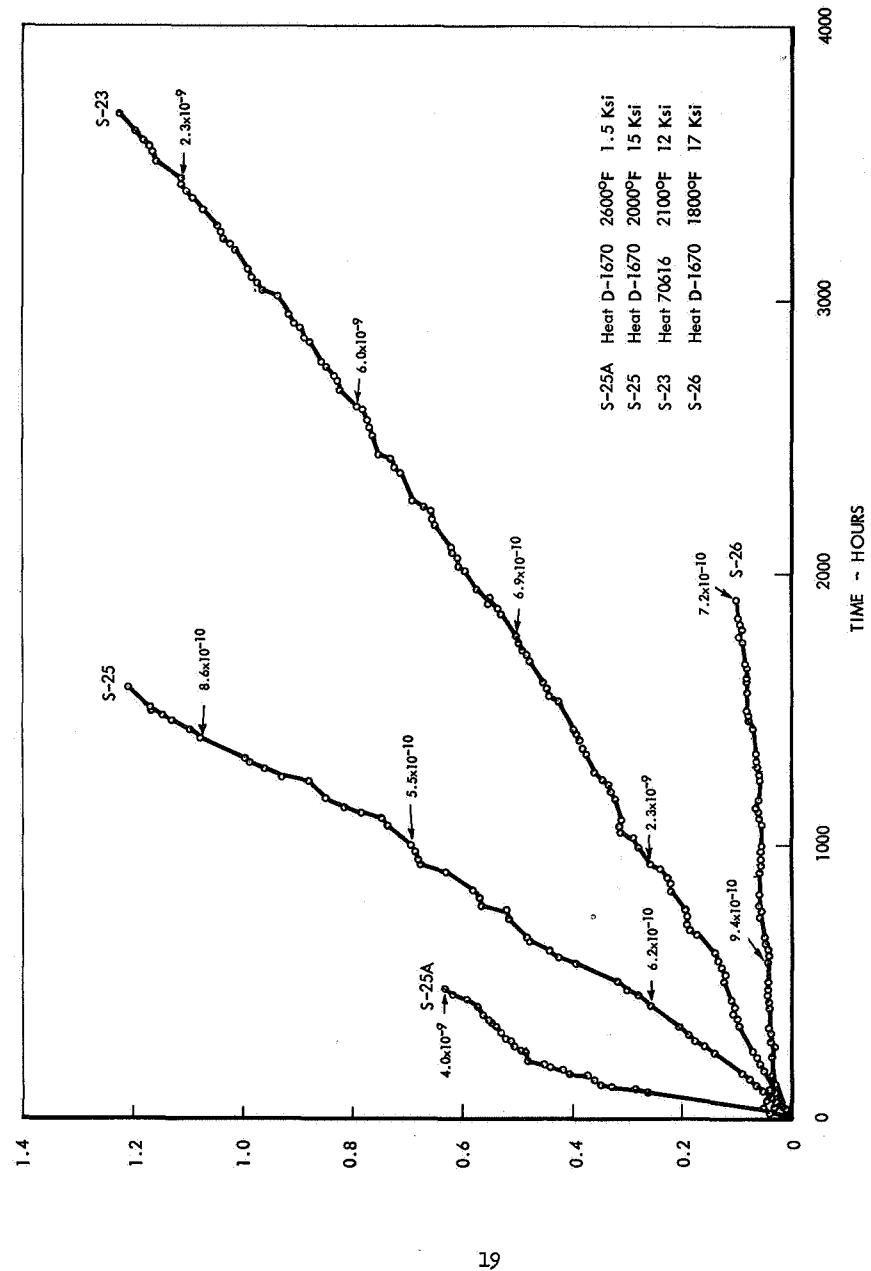


FIGURE 9 CREEP DATA FOR T-111 ALLOY ANNEALED ONE HOUR AT 3000°F (1649°C), TESTED IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.


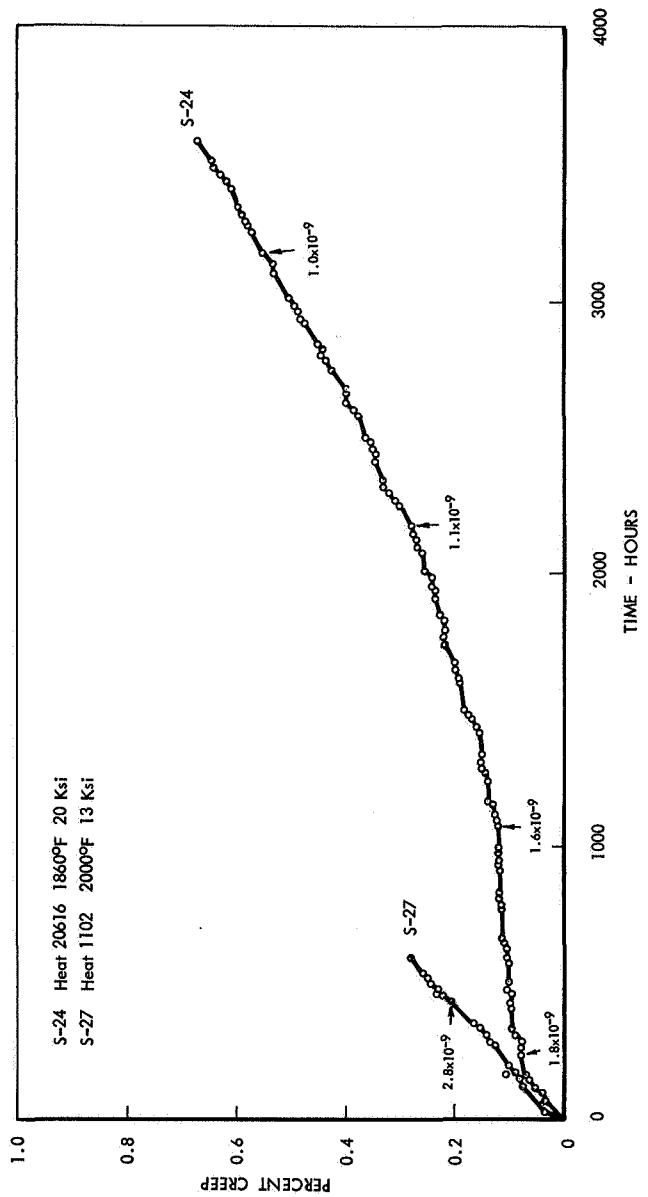


FIGURE 10 CREEP DATA FOR T-111 ALLOY ANNEALED ONE HOUR AT 3000°F (1649°C), TEST IN VACUUM ENVIRONMENT
 $< 1 \times 10^{-8}$ TORR.

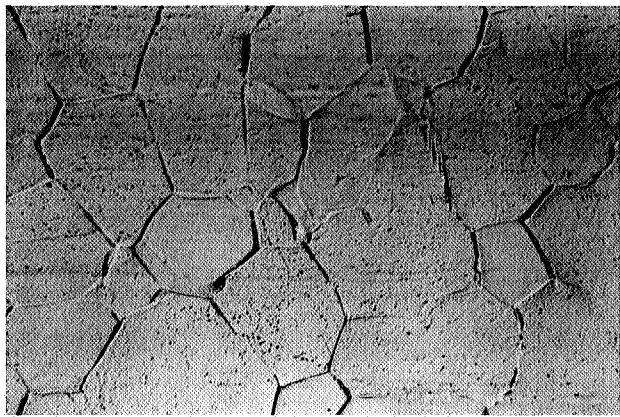

500 X

FIGURE 11 T-111 ANNEALED ONE HOUR 3000°F, TESTED AT 2200°F, AND
12 ksi for 3840 HOURS. 6.55% CREEP. ETCHANT: 75%, HF, 25% H₂O

TRW EQUIPMENT LABORATORIES

A summation of all creep test data for tantalum-base T-111 annealed 1 hour at 3000°F (1649°C) is presented in Table 6 and Figure 12. The difference in creep strength between the various heats tested in this program is not great and the results are represented by a single curve. Data obtained by Westinghouse on T-111 annealed at 3000°F (1649°C) are also shown in the figure and indicate slightly greater creep resistance than the other heats tested.

It is often difficult to predict the time required for 1% creep when a test has progressed to only 0.6% or less. In an effort to improve the prediction capabilities of the data, all of the T-111 test results which exhibited at least 1% creep were normalized with a time base of 10,000 hours. For example, if 1% creep occurred in 5000 hours, the hours associated with each creep reading would be multiplied by two and plotted as a function of the extension. The resulting normalized data points compiled from five tests, shown in Figure 13, indicate that the basic trend of each test curve is similar and no differences can be noted. Although this normalized curve may be peculiar to T-111 it represents a useful method of predicting the 1% creep in the Larson-Miller representations for this material.

Vapor Deposited Tungsten

The creep test results for the vapor-deposited tungsten are presented in Figure 14. No anomalies in the creep behavior are apparent.

IV THERMOCOUPLE DRIFT

Thermocouple drift was discussed in the Ninth Quarterly Report (NAS CR-54773). Because of the availability of additional data, the phenomenon of thermocouple drift was again examined to determine whether any new information could be obtained.

Figures 15, 16, and 17 are examples of the drift of the calibrated tungsten-3% rhenium/tungsten-25% rhenium couples. In all cases the thermocouples were of 20 mil wire. In the hot zone the couple was not insulated; however, a one inch section of beryllia was used to insulate the couple when passing out of the hot zone through the shield pack. In the cold sections of the chamber fused silica protection tubes were used to prevent shorting. In all cases the absolute temperature was maintained by an optical pyrometer once the furnace temperature was set with the calibrated couple. These data show that at approximately 1800-1900°F (982-1038°C) the drift is almost insignificant over a period of 2000 hours. However, after 10,000 hours the decrease in the EMF output may be equivalent to a temperature decrease of as much as 5-10°F (3-6°C). At higher temperatures the amount of drift increased. At 2000°F (1093°C) the thermocouple drift was 18-25°F (10-14°C) in 5000 hours and at 3200°F (1760°C) a drift of 28°F (16°C) was observed after 3500 hours.

TABLE 6

1% Creep Test Data for T-111 Tantalum Base Alloy Annealed 3000°F (1649°C) 1 Hour

Specimen No.	Heat No.	Test Temperature °F °C	Stress ksi $\text{N/m}^2 \times 10^8$	Hours for 1% Creep	Larson-Miller $T^{\alpha}R (15+\log t) \times 10^{-3}$ for 1% Creep
S-19	70616	2200	1204	8	0.511
S-21	70616	2200	1204	12	0.826
S-23	70616	2120	1160	12	0.826
S-22	70616	2000	1093	20	1.380
S-24	70616	1860	1016	20	1.380
S-25	D-1670	2000	1093	15	1.030
S-26	D-1670	1800	982	17	1.170
S-25A	D-1670	2600	1427	1.5	0.103
S-28	D-1670	2600	1427	0.5	0.034
S-27	1102	2000	1093	13	0.895

* Extrapolated Data

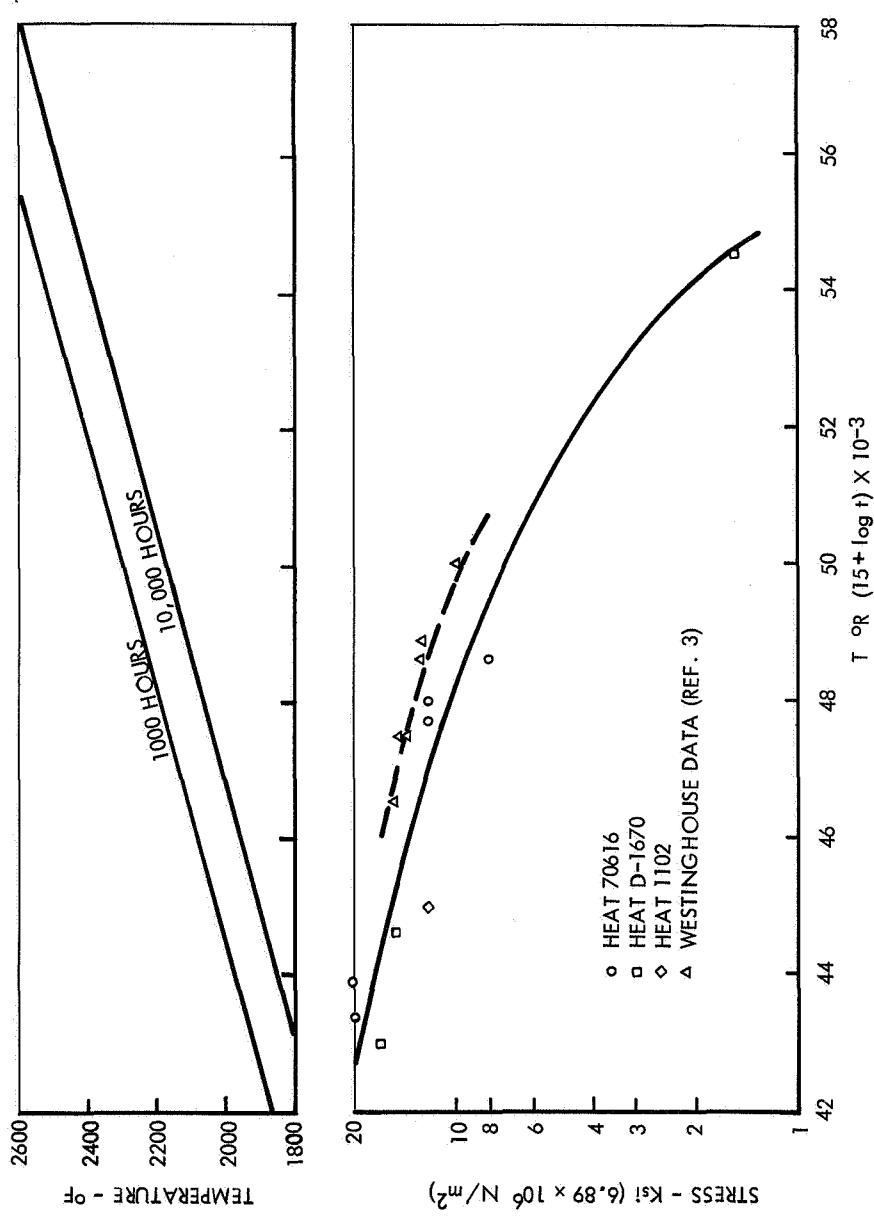


FIGURE 12 LARSON MILLER PLOT OF DATA FOR 1% CREEP IN T-111 ALLOY, ANNEALED 1 HOUR, 3000°F (1649°C), TESTED IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.

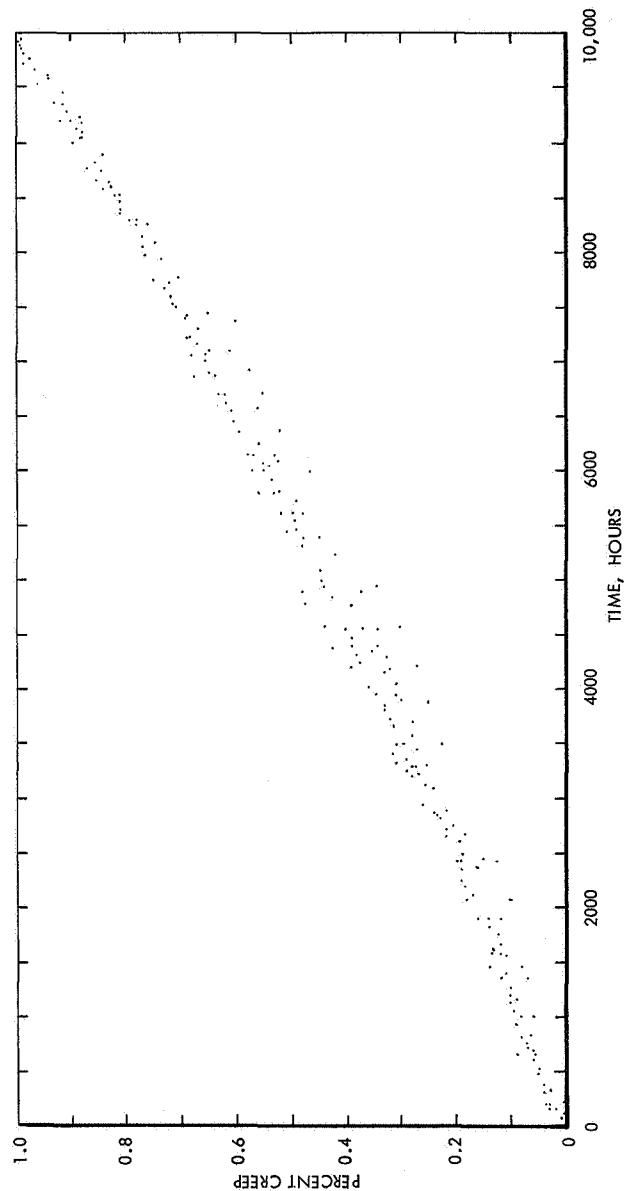


FIGURE 13 NORMALIZED CREEP DATA FOR T-111 ALLOY, ANNEALED 1 HOUR 3000°F (1649°C),
TESTED IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.

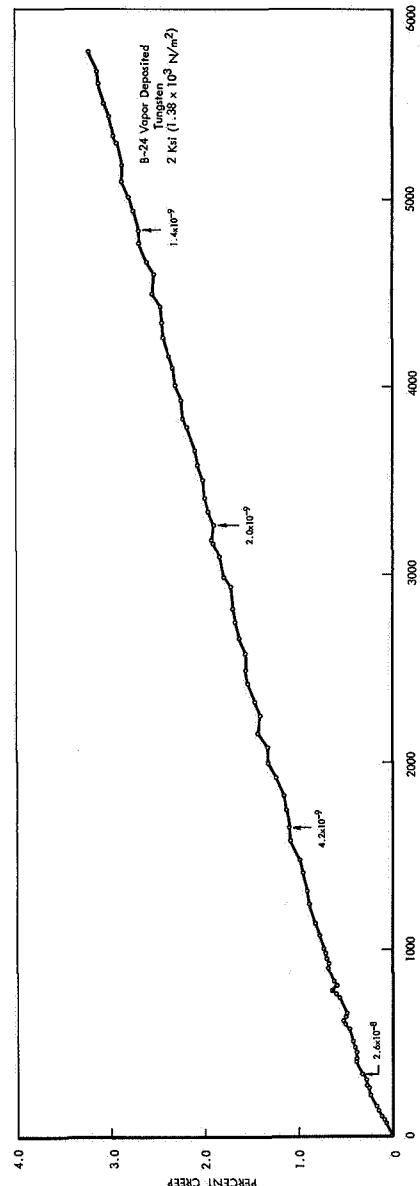


FIGURE 14 CREEP DATA FOR VAPOR-DEPOSITED TUNGSTEN ANNEALED 2800°F, 1 HOUR, AND TESTED AT 2800°F (1538°C) IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR.

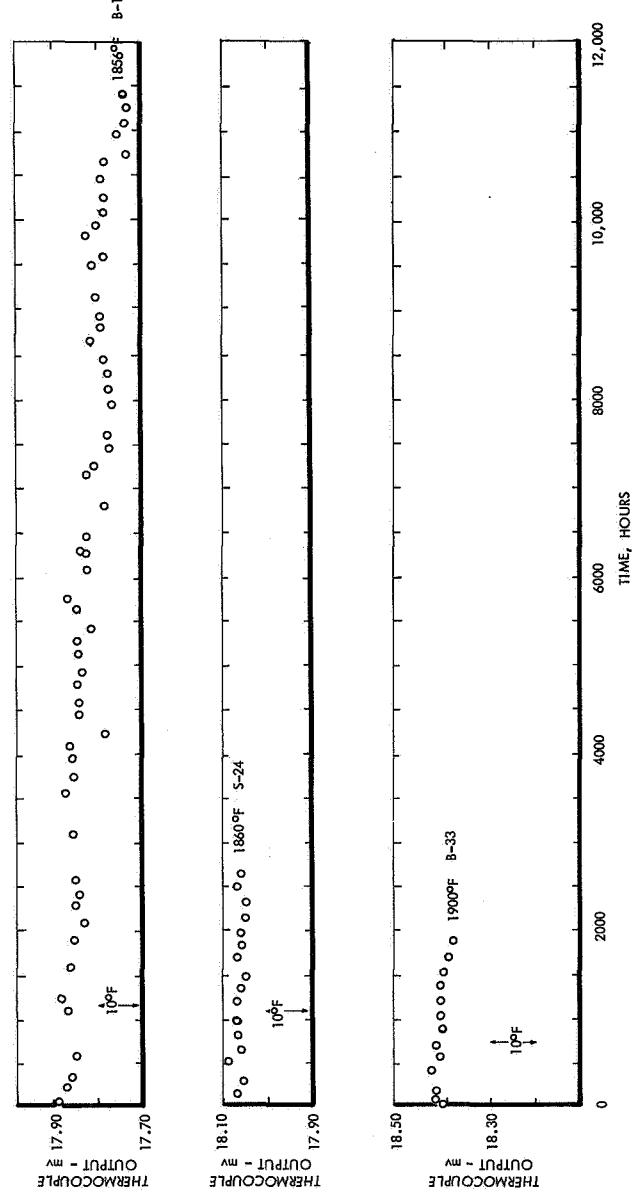


FIGURE 15 VARIATION IN THERMOCOUPLE OUTPUT (W-3%Re VS. W-25%Re) AS A FUNCTION OF TEST TIME IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR, OPTICAL STANDARD.

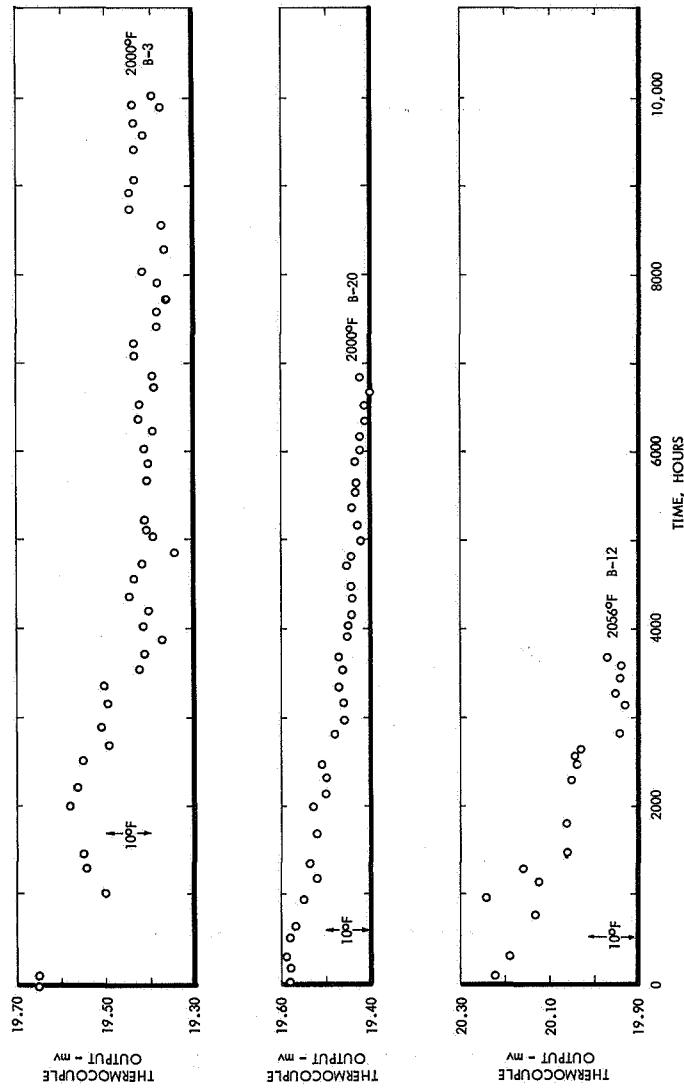


FIGURE 16 VARIATION IN THERMOCOUPLE OUTPUT (W-3%Re VS. W-25%Re) AS A FUNCTION OF TEST TIME IN VACUUM ENVIRONMENT $< 1 \times 10^{-8}$ TORR, OPTICAL STANDARD.

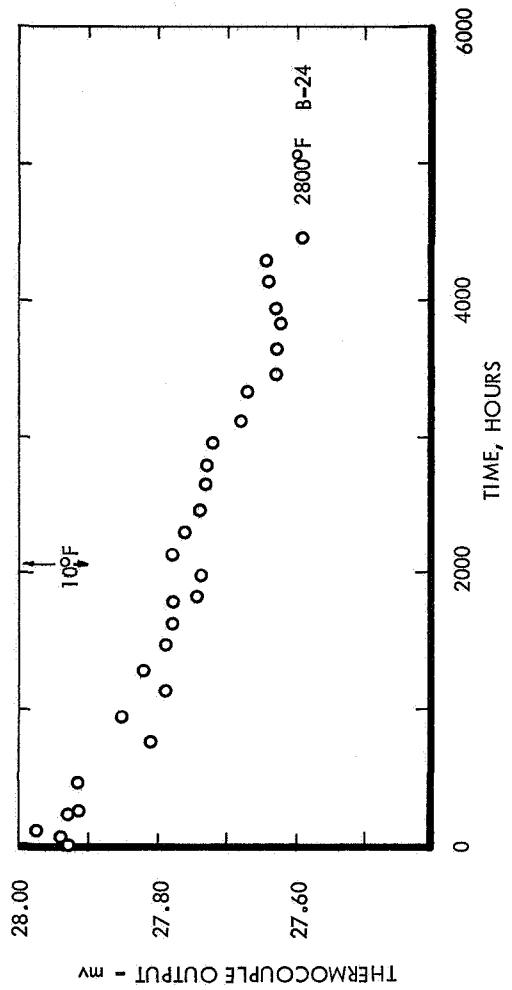


FIGURE 17 VARIATION IN THERMOCOUPLE OUTPUT (W-3% Re vs. W-25% Re) AS A FUNCTION OF TEST TIME IN VACUUM ENVIRONMENT (1×10^{-8} TORR, OPTICAL STANDARD).

Figures 15, 16, and 17 show that a scatter of the EMF readings amounts to about ± 0.025 volts which is equivalent to $\pm 2.5^{\circ}\text{F}$. The cause of the scatter is not known at this time.

V VACUUM CHAMBER RESIDUAL GAS ANALYSIS

In the Tenth Quarterly Report NAS CR-54895, the residual gas composition was given for vacuum test chambers which had been in operation for several thousand hours. While the analysis showed that the bulk of the residual gas was composed of H_2O , CO-N_2 , and CO_2 there was no quantitative correlation in composition between test units. In an effort to determine the variation in gas content during test initiation, Unit No. 3 was analyzed during the anneal and start-up of a T-111 specimen. These results are compiled in Table 7. After pump down at room temperature to 6.0×10^{-8} Torr, 66% of the residual gas (no corrections have been made for ion efficiencies) was found to be water vapor, with the next most prominent gas being CO_2 at 17%. Of particular note is that the helium and argon contents were less than 1% even though these gases are not efficiently pumped.

The unit was then brought to the annealing temperature of 3000°F (1649°C) without bakeout. The rate of heating was such that the pressure never exceeded the top of the 10^{-7} scale and for this reason no specific heating rate was maintained. In this particular test, the unit was held at 1200°F (649°C) for approximately 65 hours to determine the residual gas composition as a function of holding time.

As shown in Table 7, the percent hydrogen of the system initially increased from 2% to 20% as the temperature reached 1200°F (649°C). A first assumption would be that the increase in hydrogen was due to decomposition of water; however, it is entirely possible that some portion of the hydrogen results from outgassing of the new specimen. The percent helium also showed a substantial increase from less than 1% to 6%. The only possible source of the helium is the ion pumps, but it is not understood how the mere act of heating the specimen could cause a sudden evolution of helium from the pumps. The only possible suggestion is that the helium which is involved in the overall gas evolution that occurs during heating cannot be readily repumped. As shown in the table, the percent of hydrocarbons remained relatively constant at 8-12%. In calculating this percentage the column

TABLE 7
Residual Gas Analysis of Unbaked Unit

Time Hrs.	Temperature °F °C	Pressure Torr	T-111 Specimen				Percent CH4-O H2O	CO-N2	A	CO2
			H2	He	CH4	CH4-O H2O				
0. 0	60	1.6	6.0 x 10 ⁻⁸	2	<1	15	1.5	18	40	44
0. 8	400	204	7.0 x 10 ⁻⁷	19	5	4	8	66	7	17
3. 1	600	315	6.0 x 10 ⁻⁷	17	6	3	7	31	17	10
5. 1	1000	538	6.0 x 10 ⁻⁷	20	6	3	5	27	19	14
6. 5	1200	648	6.0 x 10 ⁻⁷	20	6	2	6	22	23	13
71. 8	1200	648	6.2 x 10 ⁻⁹	9	3	0	7	34	30	8
73. 8	2600	1427	3.7 x 10 ⁻⁹	19	5	2	6	19	27	11
73. 9	3000	1649	8.6 x 10 ⁻⁷	16	5	2	6	16	31	14
74. 9	3000	1649	4.8 x 10 ⁻⁷	16	6	3	6	18	27	15
75. 9	600	315	3.2 x 10 ⁻⁸	15	8	2	6	24	26	14
76. 5	2600	1427	2.0 x 10 ⁻⁸	18	6	2	5	21	28	14
77. 5	2600	1427	4.0 x 10 ⁻⁸	17	6	4	6	22	26	12
96. 5	2600	1427	2.4 x 10 ⁻⁸	15	4	0	7	28	31	6
268. 0	2600	1427	5.5 x 10 ⁻⁹	4	0	0	0	14	65	7
										9

designated CH₄-O (mass 16) is presumed to be mostly CH₄. During heating to 1200°F (649°C) a noticeable decrease in the percent water vapor occurred. CO-N₂, at mass 28, is assumed to be mostly CO and its presence is probably due to a reaction of the residual gases with the pump components. During heating to 1200°F (649°C), the CO-N₂ residual gas content increased significantly from 7% to 23%. Argon, being an inert gas like helium, behaved in much the same manner becoming a major gas component during heat-up. At the start, when the system was cold 17% CO₂ was present in the residual gas, but during heat-up the quantity decreased to approximately 5-6%.

As shown in Table 7 the unit was held at 1200°F for 65 hours before continuing with the heat-up to the 3000°F (1649°C) annealing temperature. During this time hydrogen, helium, and argon and CH₄ (mass 15) showed a decrease; however, the CH₄-O at mass did not decrease. During the holding period at 1200°F (649°C) the percent water, CO-N₂ and CO₂ increased.

Application of additional heat caused the gases to assume approximately the same proportions which they had at the start of the 1700°F (649°C) holding period. All of these results suggest that the percent residual gases are more directly related to the heating rate than the temperature.

After annealing the specimen, the power to the furnace was turned off and the unit allowed to cool to 600°F (315°C). As indicated in the table, this had little effect on the percent composition of the residual gas, although the pressure changes by an order of one magnitude. As a result, reheating to the test temperature of 2600°F (1427°C) caused little change in the composition. After 20 hours at 2600°F (1427°C) the changes in the residual gas were in the same direction as when the temperature was held at 1200°F (649°C).

An analysis made after 268 hours at 2600°F (1427°C) shows that the gas composition, during isothermal periods, continues to change beyond 65 hours. Hydrogen decreased to 4%, He and CH₄ decreased to a point where they could no longer be detected, and argon decreased to 7%. As noted before, the percent CO₂ increased slightly from 6 to 9%. CO-N₂ which had showed a moderate increase during the previous holding period at 1200°F (649°C) showed a marked increase during prolonged holding at 2600°F (1427°C). In fact, this species comprised the bulk of the gas at the 268 hour point. Up to this time, it had been observed that holding for 20 hours at 2600°F (1427°C) or 65 hours at 1200°F (649°C) resulted in an increase in the percent H₂O, but the last analysis at 268 hours shows that a reversal occurs with the percent of water decreasing to a value of 14%.

TRW EQUIPMENT LABORATORIES

In summary it may be said that the gas composition during test bears little resemblance to the initial composition. In general, the percent water decreases and the percent CO-N₂ increases to a notable extent.

VI BIBLIOGRAPHY

1. Technical Report AF-APL-TR-61-51, June 25, 1965.
2. Robert H. Titran and Robert W. Hall, "Ultrahigh-Vacuum Creep Behavior of Columbium and Tantalum Alloys at 2000°F and 2200°F for Times Greater than 1000 Hours," NASA TN D-3222, January, 1966.
3. R. T. Begley, "Private Communication", Westinghouse Electric Corp., Astronuclear Laboratory, (November, 1966).

TRW EQUIPMENT LABORATORIES

APPENDIX I

TRW EQUIPMENT LABORATORIES

TABLE I

CREEP TEST DATA, TZC PLATE, HEAT M-80, RECRYSTALLIZED AT 3092°F (1700°C) FOR 1 HOUR,
TESTED AT 2000°F (1093°C), 20,000 PSI (1.38 x 10⁸N/m²)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1 minutes	.00000	.000	1.2×10^{-9}
2	-.00020	-.010	
3	-.00040	-.020	
4	-.00030	-.015	
5	-.00030	-.015	
10	-.00005	-.002	
15	.00005	.002	
20	.00005	.002	
25	.00010	.005	
30	.00010	.005	
60	.00005	.002	
90	-.00005	-.002	
17.2 hours	.00040	.020	2.6×10^{-9}
41.3	.00060	.030	2.2×10^{-9}
65.2	.00080	.040	2.2×10^{-9}
89.2	.00115	.058	2.0×10^{-9}
161.3	.00110	.055	1.3×10^{-9}
185.7	.00130	.065	1.7×10^{-9}
209.1	.00125	.068	1.7×10^{-9}
233.2	.00125	.062	1.4×10^{-9}
257.3	.00130	.065	1.3×10^{-9}
329.2	.00140	.070	2.0×10^{-9}
355.9	.00145	.072	3.2×10^{-9}
377.0	.00145	.072	3.4×10^{-9}
401.1	.00145	.072	2.4×10^{-9}
425.0	.00150	.075	1.5×10^{-9}
497.2	.00170	.085	1.9×10^{-9}
521.4	.00170	.085	3.1×10^{-9}
545.4	.00165	.082	4.8×10^{-9}
569.2	.00170	.085	4.5×10^{-9}
593.1	.00170	.085	4.6×10^{-9}
665.2	.00165	.082	5.0×10^{-9}
713.3	.00160	.080	4.6×10^{-9}
762.8	.00170	.085	--
833.4	.00175	.088	1.5×10^{-8}
881.4	.00185	.092	6.1×10^{-9}
905.2	.00175	.088	5.8×10^{-9}

TABLE I (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1001.1 hours	.00185	.092	3.9×10^{-9}
1019.2	.00185	.092	6.4×10^{-9}
1097.3	.00190	.095	--
1168.4	.00195	.098	4.2×10^{-9}
1216.2	.00200	.100	7.5×10^{-9}
1264.3	.00195	.098	7.0×10^{-9}
1336.7	.00210	.105	7.5×10^{-9}
1389.5	.00250	.125	--
1433.4	.00255	.128	7.2×10^{-9}
1504.2	.00260	.130	1.3×10^{-8}
1552.3	.00270	.135	1.2×10^{-8}
1600.2	.00265	.132	2.6×10^{-9}
1672.4	.00270	.135	5.5×10^{-9}
1720.4	.00275	.138	3.8×10^{-9}
1768.5	.00285	.142	4.6×10^{-9}
1810.1	.00305	.152	4.4×10^{-9}
1894.6	.00310	.155	4.4×10^{-9}
1936.3	.00315	.158	3.8×10^{-9}
1985.6	.00310	.155	3.8×10^{-9}
2032.2	.00325	.162	4.0×10^{-9}
2057.0	.00330	.165	4.0×10^{-9}
2104.1	.00335	.168	3.8×10^{-9}
2176.1	.00345	.172	3.5×10^{-9}
2248.4	.00370	.185	4.2×10^{-9}
2272.2	.00360	.180	7.5×10^{-9}
2344.2	.00375	.188	2.4×10^{-9}
2396.9	.00380	.190	4.6×10^{-9}
2440.2	.00390	.195	4.4×10^{-9}
2512.0	.00400	.200	2.7×10^{-9}
2584.4	.00400	.200	2.9×10^{-9}
2680.2	.00400	.200	7.4×10^{-9}
2752.2	.00405	.202	5.4×10^{-9}
2872.4	.00415	.208	3.8×10^{-9}
2920.8	.00420	.210	6.2×10^{-9}
3016.1	.00425	.212	3.8×10^{-9}
3088.4	.00435	.218	2.6×10^{-9}
3184.6	.00440	.220	4.2×10^{-9}
3256.3	.00450	.225	4.4×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE I (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep %</u>	<u>Pressure (Torr)</u>
3355.4 hours	.00460	.230	--
3429.1	.00460	.230	--
3530.3	.00490	.245	--
3593.5	.00495	.247	7.8×10^{-9}
3689.9	.00500	.250	8.0×10^{-9}
3760.5	.00510	.255	8.0×10^{-9}
3856.2	.00515	.257	8.2×10^{-9}
3928.5	.00525	.262	8.2×10^{-9}
4024.1	.00575	.282	8.7×10^{-9}
4096.3	.00620	.310	8.2×10^{-9}
4192.3	.00640	.320	8.2×10^{-9}
4264.1	.00640	.320	8.2×10^{-9}
4388.3	.00640	.320	8.4×10^{-9}
4432.3	.00640	.320	9.0×10^{-9}
4528.3	.00630	.315	8.6×10^{-9}
4600.5	.00640	.320	9.4×10^{-9}
4696.7	.00625	.312	9.5×10^{-9}
4769.2	.00640	.320	8.5×10^{-9}
4866.4	.00635	.318	9.2×10^{-9}
4936.5	.00630	.315	9.2×10^{-9}
5032.5	.00635	.318	9.2×10^{-9}
5104.4	.00660	.330	8.4×10^{-9}
5200.9	.00660	.330	9.5×10^{-9}
5272.3	.00670	.335	8.8×10^{-9}
5368.8	.00675	.338	9.4×10^{-9}
5440.3	.00685	.342	9.4×10^{-9}
5536.2	.00700	.350	1.0×10^{-8}
5608.0	.00705	.352	3.4×10^{-9}
5705.8	.00715	.358	6.4×10^{-9}
5777.0	.00720	.360	4.9×10^{-9}
5873.3	.00730	.365	4.9×10^{-9}
5945.1	.00745	.372	3.4×10^{-9}
6011.2	.00750	.375	2.8×10^{-9}
6113.2	.00770	.385	3.4×10^{-9}
6209.9	.00770	.385	3.3×10^{-9}
6305.5	.00775	.388	3.5×10^{-9}
6377.5	.00780	.390	6.3×10^{-9}
6449.2	.00775	.388	7.0×10^{-9}
6545.7	.00770	.385	8.2×10^{-9}
6617.2	.00780	.390	7.4×10^{-9}
6713.2	.00780	.390	7.9×10^{-9}
6785.3	.00780	.390	7.8×10^{-9}
6881.6	.00810	.405	8.0×10^{-9}
6953.4	.00790	.395	8.3×10^{-9}
7052.7	.00805	.402	8.2×10^{-9}
7125.5	.00810	.405	8.1×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE I (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
7217.2 hours	.00810	.410	8.2×10^{-9}
7386.0	.00815	.408	7.9×10^{-9}
7457.2	.00825	.412	7.5×10^{-9}
7553.3	.00830	.415	7.6×10^{-9}
7625.7	.00835	.418	7.0×10^{-9}
7721.9	.00845	.422	7.0×10^{-9}
7793.6	.00845	.422	7.3×10^{-9}
7889.4	.00850	.425	6.5×10^{-9}
7961.2	.00855	.428	7.1×10^{-9}
8057.4	.00855	.428	7.1×10^{-9}
8129.4	.00860	.430	7.3×10^{-9}
8225.3	.00870	.435	5.2×10^{-9}
8297.5	.00875	.438	4.3×10^{-9}
8393.2	.00880	.440	1.6×10^{-9}
8465.6	.00885	.442	4.8×10^{-9}
8561.4	.00890	.445	4.8×10^{-9}
8633.1	.00895	.448	4.6×10^{-9}
8729.1	.00900	.450	5.3×10^{-9}
8801.3	.00905	.452	5.2×10^{-9}
8969.3	.00915	.458	6.0×10^{-9}
9065.3	.00920	.460	7.5×10^{-9}
9137.2	.00925	.462	9.6×10^{-9}
9233.1	.00930	.465	1.0×10^{-8}
9305.3	.00940	.470	1.0×10^{-8}
9401.9	.00965	.482	1.0×10^{-8}
9476.5	.00970	.485	1.6×10^{-8}
9569.4	.00965	.482	2.7×10^{-9}
9642.2	.00965	.482	5.4×10^{-9}
9737.6	.00960	.480	3.8×10^{-9}
9814.3	.00970	.485	5.0×10^{-9}
9904.3	.00980	.490	7.6×10^{-9}
9976.3	.00980	.490	4.6×10^{-10}
10,000.7	.00980	.490	5.2×10^{-10}
10,072.1	.00985	.492	8.5×10^{-10}
10,144.3	.00985	.492	1.0×10^{-9}
10,240.3	.00990	.495	1.5×10^{-9}
10,312.1	.00995	.498	1.9×10^{-9}
10,408.5	.01005	.502	2.2×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE I (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
10,576.5	.01010	.505	3.4×10^{-9}
10,648.2	.01010	.505	3.2×10^{-9}
10,768.7	.01020	.510	2.9×10^{-9}
10,816.2	.01020	.510	2.9×10^{-9}
10,917.0	.01020	.510	3.3×10^{-9}
10,984.1	.01025	.512	3.2×10^{-9}
11,008.1	.01025	.512	4.0×10^{-9}
11,080.2	.01030	.515	3.6×10^{-9}
11,152.5	.01035	.518	3.8×10^{-9}
11,248.2	.01030	.515	3.6×10^{-9}
11,320.3	.01030	.515	3.9×10^{-9}
11,416.5	.01040	.520	4.6×10^{-9}
11,488.2	.01040	.520	4.3×10^{-9}
11,608.2	.01050	.525	4.2×10^{-9}
11,656.9	.01050	.525	4.4×10^{-9}
11,752.4	.01055	.528	4.2×10^{-9}
11,833.2	.01055	.528	7.1×10^{-10}
11,920.2	.01060	.530	1.3×10^{-9}
11,995.5	.01065	.532	1.5×10^{-9}
12,088.7	.01070	.535	2.0×10^{-9}
12,160.4	.01080	.540	2.2×10^{-9}
12,256.6	.01100	.550	2.0×10^{-9}
12,328.8	.01100	.550	2.8×10^{-9}
12,424.3	.01110	.555	3.7×10^{-9}
12,496.1	.01100	.550	3.2×10^{-9}
12,592.3	.01100	.550	3.6×10^{-9}
12,664.1	.01120	.560	4.0×10^{-9}
12,761.1	.01125	.562	4.0×10^{-9}
12,832.3	.01125	.562	4.0×10^{-9}
12,928.1	.01130	.565	4.5×10^{-9}
13,000.3	.01130	.565	4.4×10^{-9}
13,120.9	.01130	.565	4.8×10^{-9}
13,167.9	.01140	.570	5.1×10^{-9}
13,264.4	.01150	.575	4.4×10^{-9}
13,336.0	.01155	.578	4.7×10^{-9}
13,432.8	.01160	.580	4.8×10^{-9}
13,504.4	.01165	.582	5.0×10^{-9}
13,600.2	.01165	.582	1.8×10^{-9}

Test in Progress
Specimen B-9

TRW EQUIPMENT LABORATORIES**TABLE II**

CREEP TEST DATA, TZC PLATE, RECRYSTALLIZED AT 3092°F (1700°C), FOR 1 HOUR,
TESTED AT 1856°F (1013°C). 25,000 psi (1.72×10^8 N/m²)
HEAT M-80

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 minute(s)	-.00005	-.002	
2	.00000	.000	
3	-.00005	-.002	
4	.00005	.002	
5	.00005	.002	
6	.00010	.005	
7	.00005	.002	
8	.00000	.000	
9	.00000	.000	
10	.00005	.002	
15	-.00005	-.002	
20	.00015	.008	
25	.00015	.008	
30	.00025	.012	
60	.00065	.032	
19.3 hours	.00085	.042	1.4×10^{-8}
42.1	.00095	.048	1.3×10^{-8}
68.2	.00095	.048	1.1×10^{-8}
138.4	.00090	.045	5.8×10^{-9}
162.8	.00085	.042	6.6×10^{-9}
186.0	.00085	.042	6.8×10^{-9}
210.3	.00080	.040	5.8×10^{-9}
306.2	.00075	.038	5.2×10^{-9}
330.2	.00090	.045	4.4×10^{-9}
354.2	.00085	.042	3.4×10^{-9}
381.6	.00095	.048	--
402.4	.00095	.048	3.6×10^{-9}
460.7	.00105	.052	2.5×10^{-9}
484.5	.00105	.052	2.8×10^{-9}
508.5	.00125	.062	3.4×10^{-9}
532.4	.00105	.052	3.8×10^{-9}
556.8	.00105	.052	3.2×10^{-9}
628.9	.00105	.052	3.0×10^{-9}
681.7	.00115	.058	--
725.6	.00125	.062	3.1×10^{-9}
796.4	.00130	.065	2.0×10^{-9}
844.8	.00145	.072	2.2×10^{-9}
892.4	.00145	.072	1.6×10^{-9}
964.6	.00140	.070	2.8×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE II (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep %</u>	<u>Pressure (Torr)</u>
1012.6 hours	.00155	.078	2.7×10^{-9}
1060.7	.00170	.085	2.6×10^{-9}
1132.3	.00165	.082	2.4×10^{-9}
1186.9	.00165	.082	2.0×10^{-9}
1228.6	.00170	.085	1.8×10^{-9}
1277.8	.00170	.085	2.2×10^{-9}
1324.4	.00165	.082	2.3×10^{-9}
1349.2	.00175	.088	1.4×10^{-9}
1396.3	.00185	.092	1.8×10^{-9}
1468.3	.00185	.092	2.5×10^{-9}
1516.4	.00180	.090	2.6×10^{-9}
1564.4	.00185	.092	3.1×10^{-9}
1636.4	.00195	.098	2.5×10^{-9}
1689.1	.00205	.102	2.2×10^{-9}
1732.4	.00195	.098	2.8×10^{-9}
1804.3	.00200	.100	2.0×10^{-9}
1876.7	.00215	.108	2.0×10^{-9}
1972.6	.00210	.105	2.3×10^{-9}
2044.4	.00225	.112	9.6×10^{-10}
2164.7	.00225	.112	2.5×10^{-9}
2213.1	.00235	.118	1.4×10^{-9}
2308.3	.00230	.115	1.2×10^{-9}
2380.7	.00235	.118	2.5×10^{-9}
2479.4	.00235	.118	1.2×10^{-9}
2548.4	.00235	.118	2.6×10^{-9}
2647.3	.00245	.122	1.8×10^{-9}
2720.0	.00245	.122	1.1×10^{-9}
2822.6	.00260	.130	9.1×10^{-10}
2886.4	.00305	.152	2.2×10^{-9}
2982.1	.00295	.148	1.6×10^{-9}
3052.8	.00320	.160	1.6×10^{-9}
3118.7	.00315	.158	1.6×10^{-9}
3220.7	.00315	.158	1.6×10^{-9}
3316.4	.00310	.155	1.9×10^{-9}
3388.8	.00315	.158	1.8×10^{-9}
3484.6	.00335	.168	1.6×10^{-9}
3556.4	.00330	.165	1.4×10^{-9}
3676.5	.00335	.168	1.5×10^{-9}
3724.5	.00330	.165	1.9×10^{-9}
3820.7	.00330	.165	1.6×10^{-9}
3892.7	.00320	.160	1.7×10^{-9}
3988.9	.00315	.158	2.8×10^{-9}
4061.4	.00315	.158	1.3×10^{-9}
4158.8	.00300	.150	1.8×10^{-9}
4228.7	.00300	.150	6.0×10^{-10}
4325.1	.00300	.150	1.5×10^{-9}
4396.7	.00315	.158	1.8×10^{-9}
4493.1	.00315	.158	2.0×10^{-9}

TRW EQUIPMENT LABORATORIES**TABLE II (Continued)**

<u>Time</u>	<u>Length Change △ L (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
4564.6 hours	.00310	.155	2.0×10^{-9}
4661.2	.00315	.158	1.4×10^{-9}
4732.6	.00320	.160	2.0×10^{-9}
4828.5	.00305	.152	1.7×10^{-9}
4900.3	.00310	.155	1.7×10^{-9}
4998.1	.00305	.152	1.4×10^{-9}
5069.3	.00305	.152	2.4×10^{-9}
5165.5	.00305	.152	1.6×10^{-9}
5237.4	.00310	.155	1.2×10^{-9}
5333.5	.00310	.155	1.1×10^{-9}
5405.5	.00305	.152	1.6×10^{-9}
5502.2	.00305	.152	1.1×10^{-9}
5598.0	.00310	.155	1.4×10^{-9}
5669.8	.00310	.155	1.8×10^{-9}
5741.4	.00320	.160	1.6×10^{-9}
5838.0	.00315	.158	1.6×10^{-9}
5909.4	.00325	.162	1.5×10^{-9}
6005.6	.00315	.158	1.5×10^{-9}
6077.5	.00315	.158	1.6×10^{-9}
6173.9	.00315	.158	1.6×10^{-9}
6245.7	.00320	.160	1.6×10^{-9}
6345.0	.00325	.162	1.0×10^{-9}
6417.7	.00335	.168	1.3×10^{-9}
6509.4	.00335	.168	1.5×10^{-9}
6582.0	.00340	.170	1.0×10^{-9}
6678.2	.00335	.168	1.6×10^{-9}
6749.4	.00340	.170	1.5×10^{-9}
6845.6	.00345	.172	1.6×10^{-9}
6917.9	.00350	.175	2.2×10^{-9}
7014.1	.00355	.178	1.4×10^{-9}
7085.9	.00350	.175	2.1×10^{-9}
7181.9	.00345	.172	2.3×10^{-9}
7253.6	.00355	.178	3.0×10^{-9}
7350.0	.00345	.172	1.4×10^{-9}
7421.6	.00345	.172	1.4×10^{-9}
7517.6	.00345	.172	7.8×10^{-10}
7589.7	.00350	.175	1.8×10^{-9}
7685.4	.00345	.172	1.6×10^{-9}
7757.8	.00340	.170	2.2×10^{-9}
7853.8	.00345	.172	1.8×10^{-9}
7925.4	.00340	.170	1.6×10^{-9}
8021.3	.00340	.170	1.3×10^{-9}
8093.4	.00340	.170	1.6×10^{-9}
8189.3	.00345	.172	1.7×10^{-9}
8261.5	.00345	.172	1.9×10^{-9}
8357.5	.00335	.168	1.1×10^{-9}
8429.5	.00335	.168	1.6×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE II (Continued)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
8525.3 hours	.00340	.170	1.7×10^{-9}
8597.7	.00350	.175	1.8×10^{-9}
8694.0	.00355	.178	1.6×10^{-9}
8769.8	.00350	.175	1.7×10^{-9}
8861.7	.00355	.178	1.7×10^{-9}
8934.4	.00355	.178	1.7×10^{-9}
9030.0	.00350	.175	1.7×10^{-9}
9106.9	.00350	.175	1.6×10^{-9}
9197.3	.00350	.175	2.2×10^{-9}
9268.5	.00350	.175	1.5×10^{-9}
9364.7	.00345	.172	1.6×10^{-9}
9436.8	.00335	.168	1.7×10^{-9}
9532.5	.00345	.172	1.7×10^{-9}
9604.3	.00345	.172	1.6×10^{-9}
9700.8	.00345	.172	1.6×10^{-9}
9774.3	.00335	.168	1.7×10^{-9}
9868.8	.00330	.165	1.6×10^{-9}
9940.4	.00340	.170	1.6×10^{-9}
10,060.9	.00345	.172	1.1×10^{-9}
10,108.5	.00340	.170	1.0×10^{-9}
10,207.3	.00335	.168	1.1×10^{-9}
10,276.3	.00335	.168	9.9×10^{-10}
10,300.4	.00340	.170	9.7×10^{-10}
10,372.4	.00340	.170	1.3×10^{-9}
10,444.8	.00335	.168	1.4×10^{-9}
10,510.5	.00345	.172	1.0×10^{-9}
10,612.5	.00340	.170	1.0×10^{-9}
10,708.9	.00335	.168	1.4×10^{-9}
10,780.5	.00335	.168	1.4×10^{-9}
10,900.4	.00340	.170	1.0×10^{-9}
10,989.4	.00340	.170	1.1×10^{-9}
11,044.8	.00340	.170	9.4×10^{-10}
11,125.6	.00340	.170	1.0×10^{-9}
11,212.5	.00340	.170	1.2×10^{-9}
11,287.6	.00335	.168	1.4×10^{-9}
11,381.1	.00330	.165	1.0×10^{-9}
11,453.0	.00330	.150	1.3×10^{-9}
11,549.3	.00330	.165	1.0×10^{-9}
11,621.4	.00335	.168	1.3×10^{-9}
11,716.8	.00340	.170	1.3×10^{-9}
11,788.3	.00330	.165	1.3×10^{-9}
11,844.5	.00330	.165	1.3×10^{-9}
11,956.3	.00310	.155	1.4×10^{-9}

TABLE II (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
12,054.0	.00320	.160	1.4×10^{-9}
12,124.6	.00325	.162	1.3×10^{-9}
12,220.3	.00325	.162	1.1×10^{-9}
12,292.6	.00335	.168	1.0×10^{-9}
12,413.0	.00345	.172	1.0×10^{-9}
12,460.2	.00340	.170	1.1×10^{-9}
12,556.8	.00335	.168	9.5×10^{-10}
12,628.2	.00340	.170	1.1×10^{-9}
12,725.0	.00345	.172	9.4×10^{-10}
12,796.7	.00345	.172	9.2×10^{-10}
12,892.4	.00350	.175	9.5×10^{-10}

Test in Progress

Specimen B-11

JUN 1968

JUN 1968

JUN 1968

JUN 1968

TRW EQUIPMENT LABORATORIES

TABLE III

CREEP TEST DATA, TZC PLATE, HEAT M-80, RECRYSTALLIZED AT 3092°F (1700°C), 1 HOUR,
TESTED AT 2056°F (1124°C), 19,000 PSI ($1.31 \times 10^8 \text{ N/m}^2$)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1 minutes	.00010	.005	7.0×10^{-8}
2	.00020	.010	
3	.00030	.015	
4	.00050	.025	
5	.00055	.028	
6	.00065	.032	
7	.00085	.042	
8	.00095	.048	
9	.00105	.052	
10	.00120	.060	
12	.00130	.065	
13	.00140	.070	
14	.00150	.075	
15	.00160	.080	6.9×10^{-8}
20	.00165	.082	
25	.00170	.085	
30	.00170	.085	6.9×10^{-8}
40	.00175	.088	
45	.00175	.088	
60	.00180	.090	6.8×10^{-8}
90	.00180	.090	6.7×10^{-8}
15.7 hours	.00180	.090	3.5×10^{-8}
87.1	.00180	.090	1.4×10^{-8}
111.2	.00190	.090	9.8×10^{-9}
133.4	.00140	.070	7.0×10^{-9}
159.0	.00135	.068	3.0×10^{-9}
181.6	.00130	.065	--
239.9	.00135	.068	4.2×10^{-9}
263.7	.00130	.065	5.1×10^{-9}
287.7	.00150	.075	4.5×10^{-9}
309.9	.00140	.070	3.8×10^{-9}
334.3	.00150	.075	3.2×10^{-9}
406.5	.00145	.072	3.5×10^{-9}
459.3	.00155	.078	--
503.2	.00150	.075	2.2×10^{-9}
573.9	.00175	.088	1.2×10^{-9}

TRW EQUIPMENT LABORATORIESTABLE III (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
622.5 hours	.00175	.088	1.1×10^{-9}
669.9	.00180	.090	3.8×10^{-9}
742.3	.00185	.092	2.8×10^{-9}
790.2	.00190	.095	2.8×10^{-9}
838.3	.00185	.092	1.8×10^{-9}
909.9	.00195	.098	3.2×10^{-9}
964.8	.00205	.102	2.6×10^{-9}
1006.2	.00210	.105	2.6×10^{-9}
1055.3	.00215	.108	2.7×10^{-9}
1102.0	.00220	.110	2.9×10^{-9}
1126.8	.00220	.110	1.7×10^{-9}
1173.9	.00220	.110	1.0×10^{-9}
1245.9	.00215	.108	4.2×10^{-10}
1294.0	.00225	.112	2.1×10^{-9}
1342.0	.00235	.118	2.1×10^{-10}
1414.1	.00235	.118	1.4×10^{-9}
1466.7	.00235	.118	2.5×10^{-9}
1509.0	.00225	.112	2.0×10^{-9}
1581.8	.00245	.122	7.5×10^{-10}
1654.2	.00245	.122	1.2×10^{-9}
1750.2	.00240	.120	1.3×10^{-9}
1822.1	.00235	.118	7.0×10^{-10}
1942.2	.00235	.118	8.4×10^{-10}
1990.6	.00240	.120	7.4×10^{-10}
2086.2	.00250	.125	1.6×10^{-9}
2158.2	.00260	.130	1.4×10^{-9}
2254.4	.00265	.132	7.2×10^{-10}
2326.1	.00265	.132	2.0×10^{-9}
2424.7	.00280	.140	1.4×10^{-9}
2497.4	.00305	.152	1.2×10^{-9}
2600.1	.00310	.155	8.0×10^{-10}
2664.7	.00325	.162	2.4×10^{-9}
2759.8	.00345	.172	2.6×10^{-9}
2854.3	.00355	.178	1.5×10^{-9}
2926.3	.00355	.178	1.5×10^{-9}
2998.2	.00355	.178	2.1×10^{-9}
3094.0	.00365	.182	2.1×10^{-9}
3166.4	.00360	.180	2.2×10^{-9}
3262.2	.00355	.178	9.2×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE III (Continued)

<u>Time</u>	<u>Length Change Δ L (inch) (2" G. L.)</u>	<u>Creep %</u>	<u>Pressure (Torr)</u>
3334.1 hours	.00360	.180	2.2×10^{-9}
3454.1	.00340	.170	1.6×10^{-9}
3502.1	.00365	.182	2.0×10^{-9}
3598.2	.00315	.158	1.1×10^{-9}
3670.3	.00315	.158	1.0×10^{-9}
3766.6	.00300	.150	9.0×10^{-10}
3839.0	.00305	.152	2.5×10^{-9}
3936.4	.00300	.150	9.1×10^{-10}
4006.3	.00295	.148	2.0×10^{-9}
4102.6	.00305	.152	2.1×10^{-9}
4174.3	.00310	.155	1.9×10^{-9}
4270.6	.00320	.160	1.0×10^{-9}
4342.2	.00330	.165	2.0×10^{-9}
4438.7	.00330	.165	2.5×10^{-9}
4510.1	.00355	.178	1.4×10^{-9}
4606.2	.00340	.170	2.0×10^{-9}
4677.8	.00345	.172	1.8×10^{-9}
4775.6	.00345	.172	1.8×10^{-9}
4846.8	.00335	.168	1.6×10^{-9}
4943.1	.00335	.168	1.6×10^{-9}
5015.0	.00355	.178	1.7×10^{-9}
5111.1	.00340	.170	1.6×10^{-9}
5183.2	.00345	.172	1.0×10^{-9}
5279.7	.00350	.175	1.6×10^{-9}
5375.6	.00355	.178	1.5×10^{-9}
5447.3	.00355	.178	2.5×10^{-9}
5518.9	.00355	.178	2.5×10^{-9}
5615.6	.00355	.178	1.0×10^{-9}
5687.0	.00360	.180	2.5×10^{-9}
5783.8	.00355	.178	2.4×10^{-9}
5855.1	.00365	.182	2.4×10^{-9}
5951.5	.00375	.188	2.4×10^{-9}
6023.3	.00380	.190	2.5×10^{-9}
6122.5	.00395	.198	9.0×10^{-10}
6195.3	.00390	.195	2.4×10^{-9}
6286.9	.00400	.200	2.5×10^{-9}

TABLE III (Continued)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
6359.5 hours	.00405	.202	1.0×10^{-9}
6455.8	.00410	.205	1.7×10^{-9}
6527.0	.00415	.208	2.5×10^{-9}
6623.2	.00410	.205	1.6×10^{-9}
6695.6	.00410	.205	2.3×10^{-9}
6791.8	.00420	.210	1.6×10^{-9}
6864.8	.00420	.210	1.6×10^{-9}
6959.5	.00415	.208	1.4×10^{-9}
7031.2	.00420	.210	2.4×10^{-9}
7127.6	.00435	.218	1.0×10^{-9}
7199.2	.00430	.215	2.2×10^{-9}
7295.2	.00430	.215	7.2×10^{-10}
7367.3	.00430	.215	1.1×10^{-9}
7463.2	.00425	.212	1.0×10^{-9}
7535.5	.00430	.215	1.6×10^{-9}
7631.3	.00440	.220	1.6×10^{-9}
7702.9	.00440	.220	1.6×10^{-9}
7798.9	.00440	.220	1.5×10^{-9}
7870.9	.00440	.220	1.7×10^{-9}
7966.8	.00445	.222	1.6×10^{-9}
8039.1	.00440	.220	1.6×10^{-9}
8135.2	.00450	.225	1.4×10^{-9}
8207.0	.00455	.228	1.4×10^{-9}
8302.8	.00465	.232	1.4×10^{-9}
8375.2	.00470	.235	1.4×10^{-9}
8471.6	.00475	.238	1.3×10^{-9}
8516.4	.00480	.240	1.4×10^{-9}
8639.3	.00480	.240	1.4×10^{-9}
8712.3	.00480	.240	1.3×10^{-9}
8807.6	.00470	.235	1.3×10^{-9}
8885.0	.00470	.235	1.4×10^{-9}
8975.7	.00470	.235	1.3×10^{-9}
9046.1	.00475	.238	1.4×10^{-9}
9142.2	.00475	.238	1.3×10^{-9}
9244.3	.00475	.238	1.4×10^{-9}
9310.0	.00475	.238	1.3×10^{-9}
9381.9	.00480	.240	1.4×10^{-9}
9478.8	.00480	.240	1.4×10^{-9}
9551.8	.00485	.242	1.3×10^{-9}
9616.4	.00485	.242	1.3×10^{-9}
9718.0	.00485	.242	1.4×10^{-9}
9838.4	.00490	.245	1.4×10^{-9}
9886.2	.00495	.248	1.4×10^{-9}
9985.1	.00500	.250	1.4×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE III (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
10,053.9	.00500	.250	1.3×10^{-9}
10,077.9	.00500	.250	1.3×10^{-9}
10,150.1	.00500	.250	1.4×10^{-9}
10,222.5	.00505	.252	1.3×10^{-9}
10,318.1	.00510	.255	1.3×10^{-9}
10,390.8	.00510	.255	1.3×10^{-9}
10,486.6	.00505	.252	1.3×10^{-9}
10,558.1	.00510	.255	1.3×10^{-9}
10,678.1	.00505	.252	1.2×10^{-9}
10,727.0	.00510	.255	1.2×10^{-9}
10,822.5	.00515	.258	1.2×10^{-9}
10,903.1	.00515	.258	1.2×10^{-9}
10,990.1	.00515	.258	1.2×10^{-9}
11,064.4	.00515	.258	1.2×10^{-9}
11,158.7	.00525	.262	1.2×10^{-9}
11,230.8	.00520	.260	1.2×10^{-9}
11,327.3	.00525	.262	1.2×10^{-9}
11,400.2	.00540	.270	1.2×10^{-9}
11,494.4	.00545	.272	1.2×10^{-9}
11,565.8	.00535	.266	1.2×10^{-9}
11,662.1	.00520	.260	1.2×10^{-9}
11,733.8	.00525	.262	1.2×10^{-9}
11,832.2	.00525	.262	1.2×10^{-9}
11,902.3	.00525	.262	1.2×10^{-9}
11,998.9	.00530	.265	1.2×10^{-9}
12,070.2	.00530	.265	1.2×10^{-9}
12,190.6	.00530	.265	1.3×10^{-9}
12,237.8	.00530	.265	1.3×10^{-9}
12,334.5	.00530	.265	1.4×10^{-9}
12,405.9	.00530	.265	1.2×10^{-9}
12,502.6	.00530	.265	1.2×10^{-9}
12,574.2	.00535	.268	1.2×10^{-9}
12,670.0	.00535	.268	1.2×10^{-9}

Test in Progress
Specimen B-12

TRW EQUIPMENT LABORATORIES

TABLE IV

CREEP TEST DATA, T-111 SHEET, HEAT NO. 70616, ANNEALED AT 3000°F (1649°C)
FOR 1 HOUR, TESTED AT 2100°F (1149°C), 12,000 PSI (8.28 x 10⁷ N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute(s)	.00000	.000	3.0 x 10 ⁻⁹
2	.00005	.002	3.0 x 10 ⁻⁹
3	.00010	.005	3.0 x 10 ⁻⁹
4	.00015	.008	3.0 x 10 ⁻⁹
5	.00015	.008	3.0 x 10 ⁻⁹
6	.00010	.005	3.0 x 10 ⁻⁹
7	.00010	.005	3.0 x 10 ⁻⁹
8	.00005	.002	3.0 x 10 ⁻⁹
9	.00010	.005	3.0 x 10 ⁻⁹
10	.00005	.002	3.0 x 10 ⁻⁹
15	.00000	.000	3.0 x 10 ⁻⁹
30	.00005	.002	3.0 x 10 ⁻⁹
45	.00010	.005	3.0 x 10 ⁻⁹
60	.00010	.005	3.0 x 10 ⁻⁹
19.6 Hours	.00025	.012	3.1 x 10 ⁻⁹
50.1	.00060	.030	2.4 x 10 ⁻⁹
67.5	.00070	.035	2.3 x 10 ⁻⁹
91.5	.00080	.040	2.4 x 10 ⁻⁹
164.0	.00100	.050	2.1 x 10 ⁻⁹
187.5	.00115	.058	2.1 x 10 ⁻⁹
211.3	.00125	.062	2.2 x 10 ⁻⁹
238.7	.00140	.070	2.2 x 10 ⁻⁹
331.5	.00190	.095	1.7 x 10 ⁻⁹
355.6	.00195	.098	1.8 x 10 ⁻⁹
379.3	.00205	.102	2.3 x 10 ⁻⁹
404.3	.00205	.102	2.3 x 10 ⁻⁹
427.4	.00215	.108	1.9 x 10 ⁻⁹
499.8	.00245	.122	2.2 x 10 ⁻⁹
523.3	.00240	.120	2.2 x 10 ⁻⁹
547.5	.00250	.125	2.2 x 10 ⁻⁹
576.4	.00270	.135	2.2 x 10 ⁻⁹
595.3	.00275	.138	2.4 x 10 ⁻⁹
667.2	.00310	.170	2.5 x 10 ⁻⁹
690.6	.00370	.185	2.4 x 10 ⁻⁹

TRW EQUIPMENT LABORATORIES

TABLE IV (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
714.4	.00380	.190	2.3×10^{-9}
738.5	.00385	.192	2.4×10^{-9}
762.9	.00385	.192	2.4×10^{-9}
834.3	.00440	.220	2.4×10^{-9}
858.4	.00445	.222	2.3×10^{-9}
882.5	.00455	.228	2.3×10^{-9}
906.7	.00480	.240	2.3×10^{-9}
930.3	.00515	.258	2.3×10^{-9}
1002.4	.00560	.280	2.2×10^{-9}
1026.2	.00575	.288	2.2×10^{-9}
1050.4	.00620	.310	2.2×10^{-9}
1074.2	.00630	.315	2.2×10^{-9}
1098.6	.00620	.310	2.2×10^{-9}
1170.7	.00640	.320	2.2×10^{-9}
1194.3	.00655	.328	2.2×10^{-9}
1218.3	.00665	.332	2.2×10^{-9}
1242.5	.00690	.345	2.2×10^{-9}
1266.3	.00715	.358	2.3×10^{-9}
1338.7	.00750	.375	2.3×10^{-9}
1362.5	.00760	.380	2.3×10^{-9}
1386.3	.00775	.388	2.2×10^{-9}
1410.4	.00785	.392	2.2×10^{-9}
1434.3	.00795	.398	2.2×10^{-9}
1530.8	.00850	.425	6.7×10^{-10}
1554.5	.00880	.440	6.8×10^{-10}
1578.4	.00890	.445	6.8×10^{-10}
1602.4	.00905	.452	2.2×10^{-9}
1677.5	.00955	.478	2.2×10^{-9}
1698.3	.00965	.482	6.7×10^{-9}
1722.3	.00980	.490	2.1×10^{-9}
1746.2	.00990	.495	6.6×10^{-10}
1770.2	.00995	.498	6.9×10^{-10}
1842.3	.01055	.528	2.0×10^{-9}
1866.3	.01070	.535	2.0×10^{-9}
1890.4	.01100	.550	6.3×10^{-10}
1914.6	.01095	.548	2.2×10^{-9}
1938.3	.01145	.572	6.4×10^{-10}
2010.4	.01190	.595	2.1×10^{-9}
2034.3	.01210	.605	6.3×10^{-10}
2058.4	.01220	.610	6.4×10^{-10}
2082.4	.01235	.618	6.3×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE IV (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
2106.6 Hours	.01240	.620	2.1×10^{-9}
2178.7	.01300	.650	6.1×10^{-10}
2202.6	.01310	.655	6.4×10^{-10}
2226.1	.01310	.655	2.1×10^{-9}
2250.4	.01340	.670	6.4×10^{-10}
2274.3	.01375	.688	6.3×10^{-10}
2370.3	.01430	.715	6.1×10^{-10}
2394.4	.01445	.722	6.4×10^{-10}
2419.1	.01465	.732	2.0×10^{-9}
2442.3	.01505	.752	2.0×10^{-9}
2514.7	.01530	.765	2.2×10^{-9}
2538.5	.01540	.770	2.2×10^{-9}
2564.4	.01545	.772	1.8×10^{-9}
2595.6	.01560	.780	1.7×10^{-9}
2610.4	.01575	.788	6.0×10^{-9}
2682.4	.01640	.820	6.0×10^{-10}
2706.4	.01650	.825	6.0×10^{-10}
2730.4	.01660	.830	2.0×10^{-9}
2757.6	.01690	.845	6.2×10^{-9}
2779.2	.01710	.855	6.1×10^{-10}
2850.9	.01755	.878	2.0×10^{-9}
2874.8	.01775	.888	1.6×10^{-9}
2898.6	.01795	.898	1.8×10^{-9}
2922.7	.01810	.905	2.0×10^{-9}
2946.7	.01830	.915	1.5×10^{-9}
3018.8	.01875	.938	6.0×10^{-10}
3042.6	.01930	.965	5.8×10^{-10}
3066.6	.01950	.975	1.9×10^{-9}
3091.0	.01970	.985	1.9×10^{-9}
3115.2	.01980	.990	5.9×10^{-10}
3186.5	.02030	1.015	1.9×10^{-9}
3210.7	.02050	1.025	1.8×10^{-9}
3234.2	.02070	1.035	5.9×10^{-10}
3258.2	.02080	1.040	1.8×10^{-9}
3282.3	.02090	1.045	5.9×10^{-10}
3354.5	.02150	1.075	4.8×10^{-9}
3378.3	.02180	1.090	3.2×10^{-9}
3402.1	.02205	1.102	2.7×10^{-9}
3426.2	.02220	1.110	2.4×10^{-9}
3450.0	.02220	1.110	2.3×10^{-9}
3523.6	.02315	1.158	2.1×10^{-9}
3546.2	.02330	1.165	2.0×10^{-9}
3594.5	.02355	1.178	2.1×10^{-9}
3690.3	.02440	1.220	2.0×10^{-9}
3698.2	.02450	1.225	2.0×10^{-9}

Test terminated - 1% Creep
Specimen S-23

TRW EQUIPMENT LABORATORIES

TABLE V

CREEP TEST DATA, TZC PLATE, HEAT M-91, ANNEALED AT 3092°F (1700°C) FOR 1 HOUR,
TESTED AT 2000°F (1093°C), 20,000 PSI (1.38 x 10⁸N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minutes	.00000	.000	8.2 x 10 ⁻⁹
2	.00005	.002	8.2 x 10 ⁻⁹
3	.00010	.005	8.2 x 10 ⁻⁹
4	.00010	.005	8.2 x 10 ⁻⁹
5	.00015	.008	8.2 x 10 ⁻⁹
6	.00020	.010	8.2 x 10 ⁻⁹
7	.00020	.010	8.2 x 10 ⁻⁹
8	.00020	.010	8.2 x 10 ⁻⁹
9	.00015	.008	8.2 x 10 ⁻⁹
10	.00020	.010	8.2 x 10 ⁻⁹
15	.00025	.012	8.2 x 10 ⁻⁹
20	.00020	.010	8.2 x 10 ⁻⁹
25	.00025	.012	8.2 x 10 ⁻⁹
30	.00025	.012	8.2 x 10 ⁻⁹
60	.00020	.010	8.2 x 10 ⁻⁹
1.7 Hours	.00030	.015	8.2 x 10 ⁻⁹
19.0	.00075	.038	8.4 x 10 ⁻⁹
43.9	.00100	.050	7.2 x 10 ⁻⁹
115.2	.00155	.078	4.0 x 10 ⁻⁹
139.2	.00185	.092	3.2 x 10 ⁻⁹
163.6	.00210	.105	2.6 x 10 ⁻⁹
187.1	.00220	.110	2.4 x 10 ⁻⁹
211.4	.00240	.120	2.1 x 10 ⁻⁹
283.2	.00270	.135	1.4 x 10 ⁻⁹
307.3	.00290	.145	1.2 x 10 ⁻⁹
331.2	.00300	.150	1.1 x 10 ⁻⁹
355.2	.00295	.148	9.7 x 10 ⁻¹⁰
379.3	.00295	.148	9.6 x 10 ⁻¹⁰
451.9	.00310	.155	7.9 x 10 ⁻¹⁰
499.6	.00350	.175	6.7 x 10 ⁻¹⁰
547.7	.00355	.178	6.1 x 10 ⁻¹⁰
619.5	.00360	.180	9.2 x 10 ⁻¹⁰
643.4	.00365	.182	6.3 x 10 ⁻¹⁰
667.4	.00365	.182	8.1 x 10 ⁻¹⁰
691.1	.00365	.182	8.2 x 10 ⁻¹⁰
715.5	.00375	.188	7.8 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES**TABLE V (Continued)**

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
787.7 Hours	.00410	.205	7.4×10^{-10}
811.6	.00420	.210	7.1×10^{-10}
835.3	.00435	.218	7.2×10^{-10}
859.2	.00440	.220	7.0×10^{-10}
883.2	.00445	.222	7.0×10^{-10}
956.3	.00460	.230	6.6×10^{-10}
980.0	.00470	.235	6.4×10^{-10}
1003.4	.00455	.228	6.4×10^{-10}
1027.2	.00465	.232	6.2×10^{-10}
1123.7	.00485	.242	6.0×10^{-10}
1195.5	.00490	.245	5.7×10^{-10}
1294.7	.00515	.258	6.0×10^{-10}
1367.4	.00525	.262	5.8×10^{-10}
1459.1	.00560	.280	5.6×10^{-10}
1531.7	.00585	.292	5.4×10^{-10}
1627.9	.00600	.300	5.4×10^{-10}
1699.2	.00620	.310	5.4×10^{-10}
1795.3	.00640	.320	5.4×10^{-10}
1867.8	.00655	.328	5.1×10^{-10}
1963.9	.00665	.332	5.1×10^{-10}
2035.6	.00695	.348	4.7×10^{-10}
2131.6	.00720	.360	4.8×10^{-10}
2203.3	.00740	.370	4.9×10^{-10}
2299.8	.00745	.372	4.9×10^{-10}
2371.4	.00755	.378	4.8×10^{-10}
2467.3	.00760	.380	3.6×10^{-10}
2539.5	.00770	.385	2.6×10^{-10}
2635.2	.00800	.400	3.8×10^{-10}
2707.6	.00820	.410	3.4×10^{-10}
2803.4	.00880	.440	3.4×10^{-10}
2875.1	.00900	.450	3.4×10^{-10}
2971.0	.00910	.455	3.1×10^{-10}
3043.1	.00920	.460	3.6×10^{-10}
3139.0	.00935	.468	3.3×10^{-10}
3211.3	.00930	.465	3.4×10^{-10}
3307.3	.00960	.480	3.3×10^{-10}
3379.2	.00965	.482	3.2×10^{-10}

TRW EQUIPMENT LABORATORIES.

TABLE V (Continued)

Time	Length Change L (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
3475.0 Hours	.00980	.490	3.4×10^{-10}
3547.4	.00990	.495	3.2×10^{-10}
3643.8	.00995	.498	3.2×10^{-10}
3718.6	.01020	.510	3.1×10^{-10}
3811.5	.01050	.525	3.1×10^{-10}
3884.2	.01070	.535	3.4×10^{-10}
3979.7	.01140	.570	3.1×10^{-10}
4051.3	.01145	.572	2.9×10^{-10}
4147.1	.01145	.572	2.9×10^{-10}
4218.3	.01145	.572	3.2×10^{-10}
4314.4	.01160	.580	3.1×10^{-10}
4386.5	.01165	.582	3.0×10^{-10}
4482.2	.01230	.615	2.9×10^{-10}
4554.1	.01225	.612	3.0×10^{-10}
4650.5	.01235	.618	3.2×10^{-10}
4724.0	.01240	.620	3.0×10^{-10}
4818.5	.01270	.635	3.3×10^{-10}
4890.2	.01290	.645	3.0×10^{-10}
5010.6	.01290	.645	3.2×10^{-10}
5058.3	.01300	.650	4.4×10^{-10}
5157.1	.01310	.655	3.0×10^{-10}
5226.0	.01340	.670	2.9×10^{-10}
5250.1	.01370	.685	2.8×10^{-10}
5324.2	.01375	.688	2.8×10^{-10}
5394.5	.01380	.690	2.8×10^{-10}
5490.3	.01395	.698	2.7×10^{-10}
5562.2	.01405	.702	2.8×10^{-10}
5658.7	.01420	.710	2.8×10^{-10}
5730.2	.01420	.710	2.8×10^{-10}
5850.2	.01460	.730	2.7×10^{-10}
5899.1	.01460	.730	2.7×10^{-10}
5994.6	.01500	.750	2.8×10^{-10}
6075.3	.01480	.740	2.5×10^{-10}
6162.3	.01480	.740	2.6×10^{-10}
6237.3	.01480	.740	2.6×10^{-10}
6333.6	.01480	.740	2.8×10^{-10}
6402.7	.01490	.745	2.8×10^{-10}
6499.1	.01495	.748	2.7×10^{-10}
6571.2	.01505	.752	2.7×10^{-10}
6666.5	.01520	.760	2.6×10^{-10}
6738.0	.01520	.760	2.5×10^{-10}
6834.3	.01525	.762	2.7×10^{-10}
6906.0	.01535	.766	2.7×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE Y (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
7004.4	.01550	.775	3.3×10^{-10}
7074.3	.01560	.780	2.6×10^{-10}
7170.1	.01595	.798	2.6×10^{-10}
7242.3	.01600	.800	2.5×10^{-10}
7362.8	.01605	.802	2.6×10^{-10}
7410.0	.01610	.805	2.6×10^{-10}
7506.6	.01620	.810	2.6×10^{-10}
7578.0	.01630	.815	2.5×10^{-10}
7674.8	.01650	.825	2.6×10^{-10}
7746.4	.01640	.820	2.6×10^{-10}
7842.2	.01670	.835	2.5×10^{-10}

Test in Progress
Specimen B-20

TRW EQUIPMENT LABORATORIES

TABLE VI

CREEP TEST DATA, T-111 SHEET, HEAT NO. 70616, ANNEALED 3000°F (1649°C)
FOR 1 HOUR, TESTED AT 1860°F (1016°C), 20,000 PSI (1.38 x 10⁸N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute(s)	.00010	.005	3.2 x 10 ⁻⁹
2	.00000	.000	3.2 x 10 ⁻⁹
3	.00000	.000	3.2 x 10 ⁻⁹
4	.00010	.005	3.2 x 10 ⁻⁹
5	.00015	.008	3.2 x 10 ⁻⁹
6	.00010	.005	3.2 x 10 ⁻⁹
7	.00020	.010	3.2 x 10 ⁻⁹
8	.00015	.008	3.2 x 10 ⁻⁹
9	.00015	.008	3.2 x 10 ⁻⁹
10	.00020	.010	3.2 x 10 ⁻⁹
15	.00020	.010	3.2 x 10 ⁻⁹
30	.00015	.008	3.2 x 10 ⁻⁹
45	.00015	.008	3.2 x 10 ⁻⁹
60	.00020	.010	3.2 x 10 ⁻⁹
65.2 Hours	.00070	.035	2.6 x 10 ⁻⁹
89.1	.00085	.042	2.2 x 10 ⁻⁹
113.2	.00110	.055	2.1 x 10 ⁻⁹
137.4	.00135	.068	1.9 x 10 ⁻⁹
161.0	.00140	.070	2.0 x 10 ⁻⁹
233.1	.00160	.080	1.8 x 10 ⁻⁹
256.9	.00165	.082	1.8 x 10 ⁻⁹
281.1	.00160	.080	1.8 x 10 ⁻⁹
305.0	.00180	.090	1.8 x 10 ⁻⁹
329.3	.00195	.098	1.7 x 10 ⁻⁹
401.4	.00195	.098	1.8 x 10 ⁻⁹
425.0	.00200	.100	1.6 x 10 ⁻⁹
449.1	.00200	.100	1.6 x 10 ⁻⁹
473.3	.00210	.105	1.7 x 10 ⁻⁹
497.0	.00205	.102	1.9 x 10 ⁻⁹
571.4	.00205	.102	1.7 x 10 ⁻⁹
593.3	.00210	.105	1.7 x 10 ⁻⁹

TRW EQUIPMENT LABORATORIES

TABLE VI (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
617.0	.00210	.105	1.7×10^{-9}
611.1	.00215	.108	1.7×10^{-9}
665.1	.00220	.110	1.5×10^{-9}
761.5	.00230	.115	1.5×10^{-9}
785.3	.00230	.115	1.6×10^{-9}
809.1	.00235	.118	1.6×10^{-9}
833.2	.00235	.118	1.6×10^{-9}
908.2	.00235	.118	1.7×10^{-9}
929.1	.00240	.120	1.6×10^{-9}
953.1	.00240	.120	1.6×10^{-9}
976.9	.00245	.122	1.5×10^{-9}
1001.0	.00240	.120	1.4×10^{-9}
1073.1	.00250	.125	1.6×10^{-9}
1097.0	.00250	.125	1.6×10^{-9}
1121.1	.00255	.128	1.5×10^{-9}
1145.4	.00265	.132	1.6×10^{-9}
1169.0	.00275	.138	1.5×10^{-9}
1241.2	.00280	.140	1.5×10^{-9}
1265.0	.00290	.145	1.5×10^{-9}
1289.1	.00300	.150	1.6×10^{-9}
1313.2	.00305	.152	1.7×10^{-9}
1337.3	.00300	.150	2.0×10^{-9}
1409.4	.00310	.155	1.6×10^{-9}
1433.4	.00315	.158	1.6×10^{-9}
1456.9	.00340	.170	1.6×10^{-9}
1481.1	.00350	.175	1.6×10^{-9}
1505.0	.00360	.180	1.4×10^{-9}
1601.4	.00380	.190	1.7×10^{-9}
1625.2	.00390	.195	1.5×10^{-9}
1649.8	.00395	.198	1.7×10^{-9}
1673.0	.00400	.200	1.6×10^{-9}
1745.4	.00435	.218	1.9×10^{-9}
1769.2	.00435	.218	1.9×10^{-9}
1795.2	.00435	.218	1.8×10^{-9}
1826.3	.00440	.220	1.8×10^{-9}
1841.2	.00450	.225	1.5×10^{-9}
1913.1	.00470	.235	1.0×10^{-9}
1937.1	.00470	.235	1.1×10^{-9}
1961.1	.00485	.242	1.0×10^{-9}
1988.3	.00485	.242	1.0×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE VI (Continued)

Time	Length Change L (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
2010.0	.00500	.250	1.0×10^{-9}
2081.6	.00525	.262	1.4×10^{-9}
2105.7	.00535	.268	1.2×10^{-9}
2129.3	.00545	.272	1.6×10^{-9}
2153.5	.00550	.275	1.4×10^{-9}
2177.6	.00560	.280	1.1×10^{-9}
2249.7	.00600	.300	1.1×10^{-9}
2273.4	.00620	.310	1.1×10^{-9}
2297.4	.00640	.320	1.0×10^{-9}
2321.9	.00660	.330	1.1×10^{-9}
2346.1	.00665	.332	1.0×10^{-9}
2417.3	.00690	.345	1.3×10^{-9}
2441.5	.00690	.345	1.2×10^{-9}
2465.0	.00705	.352	1.2×10^{-9}
2488.9	.00715	.356	1.1×10^{-9}
2513.0	.00725	.362	1.1×10^{-9}
2585.2	.00750	.375	1.3×10^{-9}
2609.1	.00765	.382	1.1×10^{-9}
2632.8	.00790	.395	1.1×10^{-9}
2657.0	.00790	.395	1.1×10^{-9}
2680.7	.00790	.395	1.1×10^{-9}
2754.4	.00845	.422	1.3×10^{-9}
2776.9	.00870	.435	1.1×10^{-9}
2801.2	.00880	.440	1.0×10^{-9}
2825.2	.00880	.440	1.1×10^{-9}
2849.0	.00890	.445	1.1×10^{-9}
2921.0	.00940	.470	1.1×10^{-9}
2945.2	.00960	.480	1.2×10^{-9}
2969.2	.00970	.485	1.1×10^{-9}
2993.2	.00985	.492	1.1×10^{-9}
3017.1	.01000	.500	1.2×10^{-9}
3113.7	.01055	.528	1.0×10^{-9}
3137.2	.01060	.530	1.0×10^{-9}
3160.9	.01075	.538	1.1×10^{-9}
3185.0	.01095	.548	1.0×10^{-9}
3257.5	.01140	.570	1.1×10^{-9}
3281.1	.01150	.575	1.0×10^{-9}
3305.1	.01160	.580	1.0×10^{-9}
3328.9	.01175	.588	1.0×10^{-9}
3425.6	.01215	.608	1.0×10^{-9}
3473.2	.01250	.625	1.1×10^{-9}
3497.3	.01280	.640	1.1×10^{-9}
3521.0	.01285	.642	1.1×10^{-9}
3593.1	.01335	.668	1.1×10^{-9}

Test in Progress
Specimen S-24

TRW EQUIPMENT LABORATORIES

TABLE VII

CREEP TEST DATA, TZC PLATE, HEAT M-91, ANNEALED AT 2300°F (1260°C), FOR
1 HOUR, TESTED AT 2000°F (1093°C), 28,000 PSI (1.93×10^8 N/m²)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1 Minute(s)	.00005	.002	9.0×10^{-9}
2	.00005	.002	9.0×10^{-9}
3	.00000	.000	9.0×10^{-9}
4	.00000	.000	9.0×10^{-9}
5	.00005	.002	9.0×10^{-9}
6	.00005	.002	9.0×10^{-9}
7	.00000	.000	9.0×10^{-9}
8	.00005	.002	9.0×10^{-9}
9	.00010	.005	9.0×10^{-9}
10	.00005	.002	9.0×10^{-9}
15	.00005	.002	9.0×10^{-9}
30	.00000	.000	9.0×10^{-9}
45	.00000	.000	9.0×10^{-9}
60	.00000	.000	9.0×10^{-9}
17.3 Hours	.00155	.078	3.4×10^{-9}
25.2	.00170	.085	3.3×10^{-9}
40.8	.00175	.088	1.5×10^{-9}
65.9	.00245	.122	1.1×10^{-9}
88.9	.00290	.145	1.0×10^{-9}
161.5	.00390	.195	6.4×10^{-10}
185.0	.00410	.205	6.4×10^{-10}
209.1	.00425	.212	6.0×10^{-10}
238.5	.00480	.240	5.5×10^{-10}
257.0	.00485	.242	5.2×10^{-10}
329.6	.00530	.265	4.6×10^{-10}
352.2	.00555	.278	4.6×10^{-10}
376.0	.00580	.290	4.6×10^{-10}
400.0	.00590	.295	4.9×10^{-10}
424.4	.00600	.300	4.8×10^{-10}
496.2	.00635	.318	4.2×10^{-10}
520.1	.00645	.322	4.2×10^{-10}
544.6	.00660	.330	4.1×10^{-10}
568.3	.00670	.335	4.2×10^{-10}
591.9	.00685	.342	4.2×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE VII (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
663.9	.00745	.372	3.7×10^{-10}
687.9	.00765	.382	3.7×10^{-10}
711.9	.00780	.390	3.8×10^{-10}
735.8	.00785	.392	3.6×10^{-10}
760.2	.00800	.400	3.4×10^{-10}
832.2	.00860	.430	3.6×10^{-10}
855.9	.00885	.442	3.9×10^{-10}
879.8	.00890	.445	3.6×10^{-10}
905.8	.00895	.448	3.6×10^{-10}
928.6	.00890	.445	4.8×10^{-10}
990.3	.00940	.470	3.2×10^{-10}
1014.1	.00955	.478	3.1×10^{-10}
1037.9	.00970	.485	3.6×10^{-10}
1061.9	.00980	.490	3.4×10^{-10}
1085.9	.00975	.488	3.0×10^{-10}
1182.3	.01030	.515	2.4×10^{-10}
1206.3	.01075	.538	2.1×10^{-10}
1230.0	.01075	.538	2.8×10^{-10}
1254.1	.01070	.535	2.0×10^{-10}
1328.9	.01100	.550	2.1×10^{-10}
1350.0	.01100	.550	2.0×10^{-10}
1373.9	.01110	.555	2.0×10^{-10}
1397.7	.01115	.558	2.0×10^{-10}
1421.8	.01135	.568	1.9×10^{-10}
1493.9	.01165	.582	1.8×10^{-10}
1517.8	.01170	.585	1.6×10^{-10}
1542.0	.01175	.588	1.8×10^{-10}
1566.3	.01190	.595	1.6×10^{-10}
1589.8	.01200	.600	1.6×10^{-10}
1662.0	.01250	.625	1.4×10^{-10}
1685.9	.01260	.630	1.4×10^{-10}
1710.0	.01265	.632	1.8×10^{-10}
1734.0	.01280	.640	1.3×10^{-10}

TABLE VII (Continued)

Time	Length Change L (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1759.7	.01285	.642	2.0 x 10 ⁻¹⁰
1830.5	.01310	.655	1.9 x 10 ⁻¹⁰
1854.2	.01330	.665	1.6 x 10 ⁻¹⁰
1877.7	.01340	.670	1.8 x 10 ⁻¹⁰
1902.0	.01345	.672	1.4 x 10 ⁻¹⁰
1925.9	.01355	.678	1.7 x 10 ⁻¹⁰
2021.9	.01390	.695	1.5 x 10 ⁻¹⁰
2046.3	.01405	.702	1.8 x 10 ⁻¹⁰
2070.9	.01430	.715	1.7 x 10 ⁻¹⁰
2093.9	.01460	.730	1.5 x 10 ⁻¹⁰
2166.3	.01520	.760	1.9 x 10 ⁻¹⁰
2190.1	.01530	.765	1.6 x 10 ⁻¹⁰
2216.0	.01540	.770	1.6 x 10 ⁻¹⁰
2247.0	.01545	.772	1.5 x 10 ⁻¹⁰
2262.0	.01550	.775	1.5 x 10 ⁻¹⁰
2334.0	.01565	.782	1.4 x 10 ⁻¹⁰
2357.9	.01570	.785	1.4 x 10 ⁻¹⁰
2381.9	.01580	.790	1.2 x 10 ⁻¹⁰
2409.1	.01600	.800	1.3 x 10 ⁻¹⁰
2430.8	.01610	.805	1.4 x 10 ⁻¹⁰
2502.6	.01690	.845	1.5 x 10 ⁻¹⁰
2526.9	.01715	.858	1.5 x 10 ⁻¹⁰
2550.8	.01745	.872	1.6 x 10 ⁻¹⁰
2574.5	.01780	.890	1.6 x 10 ⁻¹⁰
2598.5	.01805	.902	1.4 x 10 ⁻¹⁰
2670.6	.01835	.918	1.3 x 10 ⁻¹⁰
2694.3	.01850	.925	1.1 x 10 ⁻¹⁰
2718.5	.01895	.948	1.4 x 10 ⁻¹⁰
2743.1	.01880	.940	1.4 x 10 ⁻¹⁰
2767.1	.01880	.940	1.2 x 10 ⁻¹⁰
2838.3	.01890	.945	1.2 x 10 ⁻¹⁰
2862.3	.01910	.955	1.2 x 10 ⁻¹⁰
2885.8	.01930	.965	1.1 x 10 ⁻¹⁰
2909.7	.01940	.970	1.1 x 10 ⁻¹⁰
2933.8	.01960	.980	1.1 x 10 ⁻¹⁰
3006.1	.01990	.995	1.1 x 10 ⁻¹⁰
3029.9	.02015	1.006	1.1 x 10 ⁻¹⁰
3053.7	.02030	1.015	1.1 x 10 ⁻¹⁰
3077.6	.02045	1.022	1.2 x 10 ⁻¹⁰
3101.5	.02045	1.022	1.1 x 10 ⁻¹⁰
3176.2	.02020	1.010	1.2 x 10 ⁻¹⁰
3197.8	.02030	1.015	1.1 x 10 ⁻¹⁰
3222.0	.02035	1.018	1.0 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES

TABLE VII (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
3246.1	.02035	1.018	1.1 x 10 ⁻¹⁰
3269.8	.02040	1.020	1.2 x 10 ⁻¹⁰
3342.7	.02040	1.020	1.0 x 10 ⁻¹⁰
3365.9	.02045	1.022	1.0 x 10 ⁻¹⁰
3390.2	.02055	1.028	1.0 x 10 ⁻¹⁰
3414.1	.02055	1.028	1.0 x 10 ⁻¹⁰
3427.9	.02060	1.030	1.0 x 10 ⁻¹⁰
3534.5	.02090	1.045	1.0 x 10 ⁻¹⁰
3558.2	.02100	1.050	1.0 x 10 ⁻¹⁰
3581.7	.02110	1.055	1.0 x 10 ⁻¹⁰
3605.9	.02115	1.058	1.0 x 10 ⁻¹⁰
3678.3	.02125	1.062	1.0 x 10 ⁻¹⁰
3702.0	.02130	1.065	1.0 x 10 ⁻¹⁰
3726.0	.02140	1.070	1.0 x 10 ⁻¹⁰
3749.8	.02150	1.075	1.0 x 10 ⁻¹⁰
3774.4	.02160	1.080	1.0 x 10 ⁻¹⁰
3846.5	.02190	1.095	1.0 x 10 ⁻¹⁰
3870.0	.02200	1.100	1.0 x 10 ⁻¹⁰
3894.0	.02200	1.100	1.0 x 10 ⁻¹⁰
3918.1	.02210	1.105	1.0 x 10 ⁻¹⁰
3941.8	.02225	1.112	1.0 x 10 ⁻¹⁰
4013.9	.02250	1.125	1.0 x 10 ⁻¹⁰

Test in Progress
Specimen B-28

TABLE VIII

CREEP TEST DATA, STRESS RELIEVED TZM FORGED DISC, HEAT NO. 7502, TESTED AT 1800°F
(982°C), 44,000 PSI (3.03 x 10⁸ N/m²)

Time	Length Change L (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute (s)	.00005	.002	1.2 x 10 ⁻⁸
2	-.00005	-.002	1.2 x 10 ⁻⁸
3	.00000	.000	1.2 x 10 ⁻⁸
4	.00005	.002	1.2 x 10 ⁻⁸
5	.00015	.008	1.2 x 10 ⁻⁸
6	.00015	.008	1.2 x 10 ⁻⁸
7	.00025	.012	1.2 x 10 ⁻⁸
8	.00025	.012	1.2 x 10 ⁻⁸
9	.00020	.010	1.2 x 10 ⁻⁸
10	.00030	.015	1.2 x 10 ⁻⁸
15	.00030	.015	1.2 x 10 ⁻⁸
30	.00030	.015	1.2 x 10 ⁻⁸
45	.00030	.015	1.2 x 10 ⁻⁸
60	.00025	.012	1.2 x 10 ⁻⁸
1.4 Hours	.00030	.015	1.3 x 10 ⁻⁸
25.6	.00135	.068	3.6 x 10 ⁻⁹
53.2	.00145	.072	3.0 x 10 ⁻⁹
64.4	.00150	.075	3.1 x 10 ⁻⁹
87.6	.00155	.078	3.1 x 10 ⁻⁹
111.9	.00155	.078	2.8 x 10 ⁻⁹
135.7	.00165	.082	2.9 x 10 ⁻⁹
159.6	.00170	.085	2.8 x 10 ⁻⁹
256.2	.00185	.092	2.8 x 10 ⁻⁹
279.9	.00190	.095	3.0 x 10 ⁻⁹
303.4	.00200	.100	3.1 x 10 ⁻⁹
327.6	.00200	.100	3.1 x 10 ⁻⁹
400.0	.00230	.115	2.7 x 10 ⁻⁹
423.7	.00230	.115	2.7 x 10 ⁻⁹
447.8	.00235	.118	2.7 x 10 ⁻⁹
471.5	.00235	.118	3.0 x 10 ⁻⁹
496.1	.00245	.122	2.8 x 10 ⁻⁹
568.2	.00265	.132	2.6 x 10 ⁻⁹
591.8	.00270	.135	2.6 x 10 ⁻⁹
615.7	.00275	.138	2.6 x 10 ⁻⁹
639.8	.00280	.140	2.7 x 10 ⁻⁹
663.6	.00290	.145	2.6 x 10 ⁻⁹
735.6	.00300	.150	2.6 x 10 ⁻⁹

Test in Progress
Specimen B-35

TRW EQUIPMENT LABORATORIES

TABLE IX

CREEP TEST DATA, T-111 SHEET, HEAT NO. 111-D-1670, ANNEALED AT 3000°F (1649°C)
FOR 1 HOUR, TESTED AT 1800°F (982°C), 17,000 PSI (1.11 x 10⁸ N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute (s)	.00010	.005	5.2 x 10 ⁻⁸
2	.00015	.008	5.2 x 10 ⁻⁸
3	.00015	.008	5.2 x 10 ⁻⁸
4	.00015	.008	5.2 x 10 ⁻⁸
5	.00015	.008	5.2 x 10 ⁻⁸
6	.00015	.008	5.2 x 10 ⁻⁸
7	.00015	.008	5.2 x 10 ⁻⁸
8	.00015	.008	5.2 x 10 ⁻⁸
9	.00020	.010	5.2 x 10 ⁻⁸
10	.00015	.008	5.2 x 10 ⁻⁸
15	.00015	.008	5.2 x 10 ⁻⁸
30	.00015	.008	5.2 x 10 ⁻⁸
45	.00020	.010	5.2 x 10 ⁻⁸
60	.00020	.010	5.2 x 10 ⁻⁸
27.1 Hours	.00050	.025	1.5 x 10 ⁻⁸
49.6	.00065	.032	1.2 x 10 ⁻⁸
65.0	.00055	.028	6.4 x 10 ⁻⁹
88.7	.00055	.028	4.6 x 10 ⁻⁹
114.7	.00060	.030	3.0 x 10 ⁻⁹
145.8	.00070	.035	2.4 x 10 ⁻⁹
160.7	.00070	.035	2.0 x 10 ⁻⁹
232.7	.00070	.035	1.7 x 10 ⁻⁹
256.6	.00065	.032	1.6 x 10 ⁻⁹
280.6	.00075	.038	1.4 x 10 ⁻⁹
307.8	.00075	.038	1.4 x 10 ⁻⁹
329.5	.00080	.040	1.3 x 10 ⁻⁹
404.1	.00075	.038	1.5 x 10 ⁻⁹
425.4	.00080	.040	1.4 x 10 ⁻⁹
448.8	.00085	.042	1.4 x 10 ⁻⁹
473.1	.00085	.042	1.3 x 10 ⁻⁹
497.2	.00085	.042	1.1 x 10 ⁻⁹
569.3	.00080	.040	9.4 x 10 ⁻⁹
592.9	.00080	.040	9.2 x 10 ⁻¹⁰
617.1	.00085	.042	8.8 x 10 ⁻¹⁰
641.6	.00090	.045	8.8 x 10 ⁻¹⁰
665.7	.00095	.048	8.6 x 10 ⁻¹⁰
736.9	.00110	.055	8.2 x 10 ⁻¹⁰
761.0	.00110	.055	8.2 x 10 ⁻¹⁰
784.5	.00110	.055	7.9 x 10 ⁻¹⁰
808.5	.00110	.055	7.8 x 10 ⁻¹⁰
832.5	.00110	.055	7.7 x 10 ⁻¹⁰
904.7	.00110	.055	7.7 x 10 ⁻¹⁰
928.5	.00110	.055	7.5 x 10 ⁻¹⁰
952.4	.00110	.055	7.5 x 10 ⁻¹⁰
976.4	.00110	.055	7.2 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES

TABLE IX (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1000.2 Hours-	.00110	.055	7.0×10^{-10}
1074.0	.00110	.055	7.3×10^{-10}
1096.5	.00120	.060	6.8×10^{-10}
1120.7	.00120	.060	6.8×10^{-10}
1144.7	.00120	.060	6.9×10^{-10}
1168.5	.00115	.058	6.9×10^{-10}
1240.5	.00120	.060	6.6×10^{-10}
1264.7	.00115	.058	6.5×10^{-10}
1288.7	.00125	.062	6.5×10^{-10}
1312.7	.00125	.062	6.4×10^{-10}
1336.6	.00130	.065	6.2×10^{-10}
1433.2	.00145	.072	5.9×10^{-10}
1456.7	.00155	.078	6.1×10^{-10}
1480.4	.00155	.078	6.1×10^{-10}
1504.5	.00155	.078	6.0×10^{-10}
1577.0	.00160	.080	6.0×10^{-10}
1600.6	.00165	.082	7.1×10^{-10}
1624.6	.00165	.082	7.2×10^{-10}
1648.4	.00165	.082	7.0×10^{-10}
1673.1	.00170	.085	6.9×10^{-10}
1745.2	.00175	.088	5.4×10^{-10}
1768.7	.00180	.090	5.4×10^{-10}
1792.7	.00175	.088	5.4×10^{-10}
1816.8	.00190	.095	5.4×10^{-10}
1840.5	.00195	.098	5.4×10^{-10}
1912.6	.00200	.100	5.4×10^{-10}

Test in Progress
Specimen S-26

TRW EQUIPMENT LABORATORIES

TABLE X

CREEP TEST DATA, TZM FORGED DISC, HEAT NO. 1175, TESTED AT 1800°F (982°C)

44,000 PSI (3.03 x 10⁸N/m²)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1 minute(s)	.00000	.000	4.8 x 10 ⁻⁷
2	.00010	.005	4.8 x 10 ⁻⁷
3	.00020	.010	4.8 x 10 ⁻⁷
4	.00025	.012	4.8 x 10 ⁻⁷
5	.00015	.008	4.8 x 10 ⁻⁷
6	.00015	.008	4.8 x 10 ⁻⁷
7	.00010	.005	4.8 x 10 ⁻⁷
8	.00015	.008	4.8 x 10 ⁻⁷
9	.00020	.010	4.8 x 10 ⁻⁷
10	.00020	.010	4.8 x 10 ⁻⁷
15	.00020	.010	4.8 x 10 ⁻⁷
30	.00025	.012	4.8 x 10 ⁻⁷
45	.00025	.012	4.8 x 10 ⁻⁷
60	.00030	.015	4.8 x 10 ⁻⁷
65.5 hours	.00055	.028	3.0 x 10 ⁻⁷
89.1	.00070	.035	2.8 x 10 ⁻⁷
113.1	.00095	.048	1.1 x 10 ⁻⁸
137.1	.00100	.050	2.1 x 10 ⁻⁸
161.1	.00100	.050	1.7 x 10 ⁻⁹
233.0	.00100	.050	1.0 x 10 ⁻⁹
257.3	.00105	.052	8.4 x 10 ⁻¹⁰
280.9	.00105	.052	1.3 x 10 ⁻⁹
305.2	.00110	.055	1.6 x 10 ⁻⁹
329.4	.00110	.055	1.4 x 10 ⁻⁹
401.0	.00115	.058	1.4 x 10 ⁻⁹
426.7	.00115	.058	4.0 x 10 ⁻¹⁰
449.2	.00120	.060	5.8 x 10 ⁻¹⁰
473.4	.00130	.065	7.6 x 10 ⁻¹⁰
497.0	.00135	.068	3.8 x 10 ⁻¹⁰
569.2	.00145	.072	3.9 x 10 ⁻¹⁰
593.1	.00140	.070	5.5 x 10 ⁻¹⁰
616.9	.00145	.072	8.4 x 10 ⁻¹⁰
640.8	.00140	.070	7.8 x 10 ⁻¹⁰
664.8	.00150	.075	5.0 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES**TABLE X (Continued)**

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure</u>
736.8	.00150	.075	8.8×10^{-10}
761.7	.00150	.075	8.6×10^{-10}
785.0	.00150	.075	5.0×10^{-10}
808.8	.00155	.078	9.0×10^{-10}
833.8	.00155	.078	5.0×10^{-10}
904.7	.00160	.080	8.4×10^{-10}
928.8	.00160	.080	8.9×10^{-10}
953.1	.00160	.080	7.0×10^{-10}
977.0	.00165	.082	6.0×10^{-10}
1001.0	.00180	.090	9.2×10^{-10}
1073.0	.00180	.090	9.1×10^{-10}
1144.9	.00175	.088	8.2×10^{-10}
1240.7	.00175	.088	7.5×10^{-10}
1313.2	.00180	.090	9.0×10^{-10}
1409.5	.00180	.090	5.8×10^{-10}
1484.2	.00180	.090	4.4×10^{-10}
1577.2	.00185	.092	4.0×10^{-10}
1655.2	.00155	.092	3.5×10^{-10}
1755.9	.00190	.095	4.5×10^{-10}
1822.5	.00200	.100	4.0×10^{-10}
1913.6	.00215	.108	4.9×10^{-10}
1984.0	.00210	.105	3.5×10^{-10}
2080.1	.00215	.108	3.0×10^{-10}
2152.2	.00215	.108	4.0×10^{-10}
2247.9	.00220	.110	3.5×10^{-10}
2319.8	.00225	.112	2.8×10^{-10}
2416.7	.00235	.118	3.5×10^{-10}
2489.7	.00230	.115	2.4×10^{-10}
2584.3	.00235	.118	2.2×10^{-10}
2655.9	.00240	.120	2.4×10^{-10}
2776.3	.00250	.125	3.8×10^{-10}
2824.0	.00250	.125	4.6×10^{-10}
2922.9	.00250	.125	4.4×10^{-10}
2991.8	.00245	.122	4.0×10^{-10}
3015.8	.00245	.122	4.0×10^{-10}
3068.0	.00245	.122	3.7×10^{-10}
3160.4	.00245	.122	4.0×10^{-10}
3256.0	.00250	.125	4.4×10^{-10}
3328.7	.00255	.128	4.1×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE X (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
3424.5	.00255	.128	3.4×10^{-10}
3496.0	.00255	.128	4.5×10^{-10}
3615.9	.00260	.130	3.5×10^{-10}
3664.8	.00255	.128	3.5×10^{-10}
3760.4	.00255	.128	4.2×10^{-10}
3831.9	.00255	.128	3.5×10^{-10}
3928.0	.00255	.128	3.4×10^{-10}
4002.1	.00260	.130	3.9×10^{-10}
4096.6	.00260	.130	3.4×10^{-10}
4168.7	.00255	.128	4.0×10^{-10}
4265.1	.00265	.132	3.6×10^{-10}
4338.1	.00270	.135	3.1×10^{-10}
4432.3	.00260	.130	3.2×10^{-10}
4503.7	.00270	.135	3.5×10^{-10}
4600.0	.00290	.145	2.6×10^{-10}
4671.7	.00270	.135	3.5×10^{-10}
4770.2	.00270	.135	3.6×10^{-10}
4840.1	.00275	.138	3.5×10^{-10}
4936.8	.00275	.138	3.9×10^{-10}
5008.0	.00280	.140	3.8×10^{-10}
5128.5	.00285	.142	3.2×10^{-10}
5175.7	.00290	.145	3.0×10^{-10}
5275.4	.00290	.145	3.0×10^{-10}
5343.8	.00290	.145	3.5×10^{-10}
5440.5	.00290	.145	3.0×10^{-10}
5512.1	.00295	.148	3.0×10^{-10}
5607.9	.00295	.148	3.2×10^{-10}

Test in Progress
Specimen B-25

TRW EQUIPMENT LABORATORIESTABLE XI

CREEP TEST DATA, T-111, HEAT NO. 1102, ANNEALED AT 3000°F (1649°C) FOR 1 HOUR,
TESTED AT 2000°F (1093°C), 13,000 PSI (8.96 x 10⁻⁷ N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute (s)	.00010	.005	1.1×10^{-8}
2	.00000	.000	1.1×10^{-8}
3	.00010	.005	1.1×10^{-8}
4	.00005	.002	1.1×10^{-8}
5	.00015	.008	1.1×10^{-8}
6	.00015	.008	1.1×10^{-8}
7	.00015	.008	1.1×10^{-8}
8	.00020	.010	1.1×10^{-8}
9	.00015	.008	1.1×10^{-8}
10	.00015	.008	1.1×10^{-8}
15	.00020	.010	1.1×10^{-8}
30	.00015	.008	1.1×10^{-8}
45	.00015	.008	1.1×10^{-8}
60	.00020	.010	1.1×10^{-8}
1.5 Hours	.00020	.010	1.0×10^{-8}
18.1	.00080	.040	8.9×10^{-9}
114.4	.00150	.075	4.1×10^{-9}
138.2	.00165	.082	4.0×10^{-9}
161.9	.00210	.105	3.8×10^{-9}
186.0	.00205	.102	3.5×10^{-9}
258.4	.00250	.125	3.3×10^{-9}
282.1	.00270	.135	3.3×10^{-9}
306.1	.00280	.140	3.1×10^{-9}
330.0	.00310	.155	3.0×10^{-9}
354.6	.00330	.165	2.9×10^{-9}
426.7	.00415	.208	2.8×10^{-9}
450.2	.00440	.220	2.8×10^{-9}
474.2	.00470	.235	2.8×10^{-9}
498.3	.00490	.245	2.7×10^{-9}
522.1	.00495	.248	2.8×10^{-9}
594.1	.00555	.278	2.4×10^{-9}

Test In Progress
Specimen S-27

TRW EQUIPMENT LABORATORIES

TABLE XII

CREEP TEST DATA, TZC PLATE, HEAT M-91, ANNEALED AT 2500°F (1371°C) FOR 1 HOUR
TESTED AT 1935°F (1057°C), 20,000 PSI (1.38 x 10⁸ N/m²)

<u>Time</u>	<u>Length Change</u> <u>ΔL (inch)</u> <u>(2" G.L.)</u>	<u>Creep</u> <u>(%)</u>	<u>Pressure</u> <u>(Torr)</u>
1 Minute(s)	.00000	.000	2.0 x 10 ⁻⁸
2	-.00005	-.002	2.0 x 10 ⁻⁸
3	-.00010	-.005	2.0 x 10 ⁻⁸
4	-.00010	-.005	2.0 x 10 ⁻⁸
5	-.00010	-.005	2.0 x 10 ⁻⁸
6	-.00015	-.008	2.0 x 10 ⁻⁸
7	-.00015	-.008	2.0 x 10 ⁻⁸
8	-.00020	-.010	2.0 x 10 ⁻⁸
9	-.00015	-.008	2.0 x 10 ⁻⁸
10	-.00015	-.008	2.0 x 10 ⁻⁸
15	-.00010	-.005	2.0 x 10 ⁻⁸
30	-.00030	-.015	2.0 x 10 ⁻⁸
45	-.00030	-.015	2.0 x 10 ⁻⁸
60	-.00025	-.012	2.0 x 10 ⁻⁸
16.8 Hours	.00015	.008	1.1 x 10 ⁻⁸
91.2	.00080	.040	2.7 x 10 ⁻⁹
113.1	.00100	.050	2.2 x 10 ⁻⁹
136.1	.00105	.052	2.0 x 10 ⁻⁹
160.9	.00105	.052	1.7 x 10 ⁻⁹
184.9	.00115	.058	1.6 x 10 ⁻⁹
281.3	.00120	.060	5.2 x 10 ⁻¹⁰
305.1	.00120	.060	5.1 x 10 ⁻¹⁰
328.9	.00125	.062	5.1 x 10 ⁻¹⁰
353.0	.00130	.065	5.3 x 10 ⁻¹⁰
428.0	.00170	.085	4.8 x 10 ⁻¹⁰
448.9	.00180	.090	4.6 x 10 ⁻¹⁰
472.8	.00185	.092	1.2 x 10 ⁻⁹
496.7	.00185	.092	4.7 x 10 ⁻¹⁰
520.7	.00185	.092	1.1 x 10 ⁻⁹
592.9	.00190	.095	9.5 x 10 ⁻¹⁰
616.8	.00190	.095	9.8 x 10 ⁻¹⁰
640.9	.00190	.095	9.5 x 10 ⁻¹⁰
665.2	.00195	.098	9.8 x 10 ⁻¹⁰
688.8	.00190	.095	9.8 x 10 ⁻¹⁰
761.0	.00200	.100	9.2 x 10 ⁻¹⁰
784.8	.00195	.098	9.2 x 10 ⁻¹⁰
808.9	.00195	.098	9.8 x 10 ⁻¹⁰
833.0	.00200	.100	1.1 x 10 ⁻⁹

TRW EQUIPMENT LABORATORIES

TABLE XIII (Continued)

Time <u>Time</u>	Length Change <u>Δ L (inch) (2" G.L.)</u>	Creep <u>(%)</u>	Pressure <u>(Torr)</u>
857.1 (Hours)	.00195	.098	1.4×10^{-9}
929.2	.00210	.105	9.0×10^{-10}
953.1	.00210	.105	7.8×10^{-10}
976.7	.00220	.110	8.3×10^{-10}
1000.9	.00215	.108	8.8×10^{-10}
1024.9	.00230	.115	7.9×10^{-10}
1120.9	.00235	.118	8.1×10^{-10}
1145.0	.00235	.118	7.4×10^{-10}
1169.6	.00230	.115	7.2×10^{-10}
1192.8	.00230	.115	7.1×10^{-10}
1265.2	.00235	.118	8.0×10^{-10}
1346.1	.00250	.125	7.2×10^{-10}
1432.9	.00255	.128	5.6×10^{-10}
1508.1	.00260	.130	5.5×10^{-10}
1604.4	.00250	.125	7.2×10^{-10}
1673.4	.00270	.135	6.3×10^{-10}
1769.5	.00280	.140	4.7×10^{-10}
1841.8	.00280	.140	4.7×10^{-10}
1937.1	.00290	.145	4.6×10^{-10}
2008.7	.00300	.150	4.5×10^{-10}
2105.0	.00300	.150	5.2×10^{-10}
2176.6	.00300	.150	4.2×10^{-10}
2274.3	.00340	.170	4.7×10^{-10}
2345.0	.00385	.192	4.2×10^{-10}
2440.8	.00380	.190	4.0×10^{-10}
2513.0	.00385	.192	4.4×10^{-10}
2633.5	.00380	.190	3.6×10^{-10}
2680.6	.00380	.190	3.8×10^{-10}
2777.3	.00385	.192	4.2×10^{-10}
2848.7	.00385	.192	3.5×10^{-10}
2945.4	.00385	.192	3.3×10^{-10}
3017.1	.00390	.195	3.6×10^{-10}
3112.9	.00395	.198	3.4×10^{-10}

Test in Progress
Specimen B-32

TRW EQUIPMENT LABORATORIES

TABLE XIII

CREEP TEST DATA, TZC PLATE, HEAT NO M-91, ANNEALED AT 2500°F (1371°C) FOR 1 HOUR,
TESTED AT 1900°F (1038°C), 22,000 PSI (1.52×10^8 N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute(s)	-.00005	-.002	9.7×10^{-9}
2	-.00005	-.002	9.7×10^{-9}
3	-.00010	-.005	9.7×10^{-9}
4	.00005	.002	9.7×10^{-9}
5	.00005	.002	9.7×10^{-9}
6	.00005	.002	9.7×10^{-9}
7	.00005	.002	9.7×10^{-9}
8	.00010	.005	9.7×10^{-9}
9	.00010	.005	9.7×10^{-9}
10	.00010	.005	9.7×10^{-9}
15	.00015	.008	9.7×10^{-9}
30	.00020	.010	9.7×10^{-9}
45	.00020	.010	9.7×10^{-9}
60	.00030	.015	9.7×10^{-9}
17.2 Hours	.00065	.032	5.2×10^{-9}
41.3	.00115	.058	3.7×10^{-9}
44.2	.00120	.060	3.7×10^{-9}
70.1	.00180	.090	3.2×10^{-9}
98.5	.00195	.098	2.6×10^{-9}
116.1	.00200	.100	2.5×10^{-9}
137.2	.00200	.100	2.2×10^{-9}
161.1	.00205	.102	1.8×10^{-9}
184.9	.00210	.105	1.7×10^{-9}
209.0	.00205	.102	1.7×10^{-9}
281.1	.00240	.120	1.6×10^{-9}
305.0	.00245	.122	1.5×10^{-9}
329.2	.00250	.125	1.4×10^{-9}
353.4	.00270	.135	1.3×10^{-9}
377.0	.00275	.138	1.1×10^{-9}
449.1	.00285	.142	1.0×10^{-9}
473.0	.00295	.148	1.0×10^{-9}
497.1	.00300	.150	1.2×10^{-9}
521.9	.00310	.155	1.3×10^{-9}
546.8	.00310	.155	1.5×10^{-9}
617.7	.00315	.158	1.4×10^{-9}
641.3	.00320	.160	1.2×10^{-9}
664.8	.00325	.162	1.2×10^{-9}
689.1	.00335	.168	1.2×10^{-9}
713.0	.00340	.170	6.4×10^{-10}
809.1	.00350	.175	9.6×10^{-10}
833.4	.00355	.178	9.7×10^{-10}
858.0	.00360	.180	9.5×10^{-10}
881.1	.00365	.182	9.2×10^{-10}
953.4	.00375	.188	8.3×10^{-10}
977.3	.00380	.190	9.2×10^{-10}

TABLE XIII (Continued)

Time	Length Change △ L (inch) (2" G. L.)	Creep (%)	Pressure (Torr)
1003.2	.00380	.190	9.1 x 10 ⁻¹⁰
1034.2	.00380	.190	8.8 x 10 ⁻¹⁰
1049.2	.00375	.188	8.5 x 10 ⁻¹⁰
1121.2	.00390	.195	7.9 x 10 ⁻¹⁰
1145.0	.00385	.192	8.2 x 10 ⁻¹⁰
1169.1	.00390	.195	7.8 x 10 ⁻¹⁰
1195.4	.00390	.195	7.5 x 10 ⁻¹⁰
1218.0	.00400	.200	3.5 x 10 ⁻¹⁰
1289.8	.00425	.212	6.6 x 10 ⁻¹⁰
1314.0	.00430	.215	7.3 x 10 ⁻¹⁰
1337.9	.00430	.215	6.9 x 10 ⁻¹⁰
1361.8	.00435	.218	4.1 x 10 ⁻¹⁰
1385.7	.00445	.222	6.4 x 10 ⁻¹⁰
1458.1	.00460	.230	3.2 x 10 ⁻¹⁰
1481.5	.00470	.235	3.5 x 10 ⁻¹⁰
1505.8	.00470	.235	7.1 x 10 ⁻¹⁰
1531.0	.00475	.238	7.0 x 10 ⁻¹⁰
1554.2	.00480	.240	6.6 x 10 ⁻¹⁰
1625.3	.00470	.235	6.9 x 10 ⁻¹⁰
1649.5	.00470	.235	3.1 x 10 ⁻¹⁰
1673.1	.00485	.242	6.6 x 10 ⁻¹⁰
1696.3	.00490	.245	6.6 x 10 ⁻¹⁰
1720.9	.00490	.245	6.4 x 10 ⁻¹⁰
1793.2	.00480	.240	6.6 x 10 ⁻¹⁰
1817.0	.00495	.246	3.0 x 10 ⁻¹⁰
1840.8	.00510	.255	6.4 x 10 ⁻¹⁰
1864.9	.00520	.260	6.3 x 10 ⁻¹⁰
1888.7	.00520	.260	6.2 x 10 ⁻¹⁰
1963.3	.00525	.262	6.5 x 10 ⁻¹⁰
1984.9	.00535	.268	2.6 x 10 ⁻¹⁰
2009.2	.00535	.268	6.0 x 10 ⁻¹⁰
2033.3	.00540	.270	6.4 x 10 ⁻¹⁰
2056.9	.00555	.278	6.7 x 10 ⁻¹⁰
2129.9	.00570	.285	7.2 x 10 ⁻¹⁰
2153.1	.00565	.282	6.8 x 10 ⁻¹⁰
2177.4	.00570	.285	7.0 x 10 ⁻¹⁰
2201.2	.00580	.290	7.0 x 10 ⁻¹⁰
2225.1	.00580	.290	5.8 x 10 ⁻¹⁰
2321.7	.00590	.295	6.4 x 10 ⁻¹⁰
2345.3	.00585	.292	6.4 x 10 ⁻¹⁰
2368.9	.00585	.292	5.7 x 10 ⁻¹⁰
2393.0	.00590	.295	6.8 x 10 ⁻¹⁰
2465.5	.00585	.292	6.6 x 10 ⁻¹⁰
2489.2	.00585	.292	6.8 x 10 ⁻¹⁰
2513.2	.00590	.295	6.4 x 10 ⁻¹⁰
2536.9	.00590	.295	6.6 x 10 ⁻¹⁰
2561.6	.00590	.295	6.4 x 10 ⁻¹⁰
2633.7	.00595	.298	6.1 x 10 ⁻¹⁰
2657.2	.00595	.298	6.2 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES

TABLE XIII (Continued)

<u>Time</u>	<u>Length Change ΔL (inch) (2" G. L.)</u>	<u>Creep (%(</u>	<u>Pressure (Torr)</u>
2681.2	.00595	.298	6.2×10^{-10}
2705.3	.00600	.300	6.4×10^{-10}
2729.0	.00605	.302	6.3×10^{-10}
2801.0	.00605	.302	6.3×10^{-10}

Test in Progress
Specimen B-33

TRW EQUIPMENT LABORATORIES**TABLE XIV**

CREEP TEST DATA, TZM COMMERCIAL BAR, HEAT NO. 7463, STRESS RELIEVED 0.5 HOUR AT
2250°F (1232°C) TESTED AT 2000°F (1093°C), 41,000 PSI (2.82 x 10⁻⁸ N/m²)

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute(s)	-.00005	-.002	2.4 x 10 ⁻⁸
2	-.00010	-.005	2.4 x 10 ⁻⁸
3	-.00015	-.008	2.4 x 10 ⁻⁸
4	-.00010	-.005	2.4 x 10 ⁻⁸
5	-.00010	-.005	2.4 x 10 ⁻⁸
6	-.00010	-.005	2.4 x 10 ⁻⁸
7	-.00010	-.005	2.4 x 10 ⁻⁸
8	-.00015	-.008	2.4 x 10 ⁻⁸
9	-.00015	-.008	2.4 x 10 ⁻⁸
10	-.00010	-.005	2.4 x 10 ⁻⁸
15	-.00015	-.008	2.4 x 10 ⁻⁸
30	-.00005	-.002	2.4 x 10 ⁻⁸
45	-.00005	-.002	2.4 x 10 ⁻⁸
60	.00005	.002	2.4 x 10 ⁻⁸
18.5 Hours	.00110	.055	2.7 x 10 ⁻⁹
24.8	.00160	.080	3.0 x 10 ⁻⁹
50.9	.00260	.130	1.4 x 10 ⁻⁹
74.7	.00235	.118	9.7 x 10 ⁻¹⁰
88.6	.00285	.142	1.0 x 10 ⁻⁹
96.7	.00320	.160	1.0 x 10 ⁻⁹
113.0	.00335	.168	9.4 x 10 ⁻¹⁰
120.5	.00340	.170	9.5 x 10 ⁻¹⁰
136.5	.00365	.182	8.8 x 10 ⁻¹⁰
144.8	.00375	.188	8.0 x 10 ⁻¹⁰
160.7	.00400	.200	6.4 x 10 ⁻¹⁰
168.0	.00405	.202	6.3 x 10 ⁻¹⁰
184.7	.00410	.205	8.0 x 10 ⁻¹⁰
280.7	.00495	.248	5.5 x 10 ⁻¹⁰
305.1	.00520	.260	5.5 x 10 ⁻¹⁰
329.7	.00540	.270	5.4 x 10 ⁻¹⁰
352.8	.00565	.282	5.4 x 10 ⁻¹⁰
425.2	.00600	.300	5.9 x 10 ⁻¹⁰
448.9	.00640	.320	5.4 x 10 ⁻¹⁰
474.9	.00660	.330	5.3 x 10 ⁻¹⁰
505.8	.00675	.338	4.9 x 10 ⁻¹⁰
520.8	.00685	.342	5.0 x 10 ⁻¹⁰
592.8	.00760	.380	5.0 x 10 ⁻¹⁰
616.7	.00785	.392	5.0 x 10 ⁻¹⁰
640.7	.00815	.408	4.7 x 10 ⁻¹⁰
667.1	.00855	.428	4.8 x 10 ⁻¹⁰
689.7	.00885	.442	5.0 x 10 ⁻¹⁰
761.4	.00960	.480	5.5 x 10 ⁻¹⁰
785.7	.00975	.488	5.4 x 10 ⁻¹⁰
809.6	.01025	.512	7.3 x 10 ⁻¹⁰
883.5	.01065	.532	5.0 x 10 ⁻¹⁰
857.3	.01105	.552	5.2 x 10 ⁻¹⁰
929.8	.01230	.615	4.9 x 10 ⁻¹⁰

TRW EQUIPMENT LABORATORIES

TABLE XIV (Continued)

<u>Time</u>	<u>Length Change Δ L (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
953.1	.0260	.630	4.7×10^{-10}
977.5	.01315	.658	4.9×10^{-10}
1002.7	.01345	.672	4.9×10^{-10}
1026.0	.01380	.690	4.5×10^{-10}
1097.1	.01560	.780	4.9×10^{-10}
1121.1	.01615	.806	4.8×10^{-10}
1144.7	.01685	.842	4.8×10^{-10}
1168.5	.01755	.876	4.8×10^{-10}
1192.6	.01835	.916	4.7×10^{-10}
1264.8	.02140	1.070	7.0×10^{-10}
1288.7	.02245	1.122	4.9×10^{-10}
1312.5	.02365	1.182	4.8×10^{-10}
1336.5	.02500	1.250	4.8×10^{-10}
1360.3	.02625	1.312	4.6×10^{-10}
1435.0	.03235	1.618	5.4×10^{-10}
1440.7	.03315	1.658	5.4×10^{-10}

Test Terminated - 1% Creep
Specimen B-34

TRW EQUIPMENT LABORATORIES

TABLE XV

CREEP TEST DATA, T-111 SHEET, HEAT NO. LLL-D-1670, ANNEALED 3000°F (1649°C) FOR
1 HOUR TESTED AT 2000°F (1093°C), 15,000 PSI (1.03×10^{-8} N/m²)

Time	Length Change ΔL (inch) (2" G. L.)	Creep (%)	Pressure (Torr)
1 Minute(s)	.00010	.005	1.7×10^{-8}
2	.00020	.010	1.7×10^{-8}
3	.00030	.015	1.7×10^{-8}
4	.00035	.018	1.7×10^{-8}
5	.00040	.020	1.7×10^{-8}
6	.00035	.018	1.7×10^{-8}
7	.00040	.020	1.7×10^{-8}
8	.00035	.018	1.7×10^{-8}
9	.00035	.018	1.7×10^{-8}
10	.00030	.015	1.7×10^{-8}
15	.00040	.020	1.7×10^{-8}
30	.00030	.015	1.7×10^{-8}
45	.00035	.018	1.7×10^{-8}
60	.00035	.018	1.7×10^{-8}
26.2 Hours	.00055	.028	4.8×10^{-9}
49.7	.00065	.032	2.2×10^{-9}
63.4	.00095	.048	2.0×10^{-9}
87.3	.00110	.055	1.3×10^{-9}
111.4	.00130	.065	1.5×10^{-9}
135.4	.00155	.078	2.0×10^{-9}
159.5	.00185	.092	2.1×10^{-9}
231.6	.00285	.142	1.2×10^{-9}
255.6	.00320	.160	1.1×10^{-9}
279.1	.00360	.180	1.1×10^{-9}
303.4	.00375	.188	1.0×10^{-9}
327.3	.00405	.202	9.8×10^{-10}
423.3	.00510	.255	6.2×10^{-10}
447.4	.00550	.275	8.5×10^{-10}
472.1	.00590	.295	8.6×10^{-10}
495.3	.00630	.315	8.2×10^{-10}
567.6	.00785	.392	7.8×10^{-10}
591.4	.00850	.425	7.8×10^{-10}
617.4	.00885	.442	6.3×10^{-10}
648.6	.00950	.475	7.8×10^{-10}
663.4	.00965	.482	7.4×10^{-10}
735.4	.01025	.512	7.5×10^{-10}
759.3	.01040	.520	7.4×10^{-10}
783.4	.01125	.562	7.4×10^{-10}
810.6	.01145	.572	7.4×10^{-10}
832.2	.01155	.578	7.3×10^{-10}
903.9	.01255	.628	7.2×10^{-10}
927.6	.01350	.675	5.4×10^{-10}
951.4	.01360	.680	2.0×10^{-9}
975.7	.01370	.685	6.9×10^{-10}
999.7	.01385	.692	5.5×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE XV (Continued)

<u>Time</u>	<u>Length Change Δ L (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1071.8 Hours	.01470	.735	6.8×10^{-10}
1095.7	.01490	.745	6.8×10^{-10}
1119.6	.01560	.780	6.6×10^{-10}
1143.9	.01625	.812	6.7×10^{-10}
1168.2	.01695	.848	6.6×10^{-10}
1239.5	.01760	.880	6.6×10^{-10}
1263.7	.01860	.930	6.6×10^{-10}
1287.2	.01920	.960	6.4×10^{-10}
1311.2	.01970	.985	6.5×10^{-10}
1335.2	.01995	.996	6.5×10^{-10}
1407.5	.02150	1.075	8.6×10^{-10}
1431.3	.02195	1.096	1.5×10^{-9}
1455.1	.02250	1.125	1.4×10^{-9}
1479.2	.02285	1.142	1.3×10^{-9}
1502.9	.02335	1.166	6.4×10^{-10}
1576.4	.02410	1.205	6.6×10^{-10}
1583.5	.02420	1.210	6.6×10^{-10}

Test Terminated - 1% Creep
Specimen S-25

TRW EQUIPMENT LABORATORIES

TABLE XVI

CREEP TEST DATA, T-111 SHEET, HEAT NO. T-111-D-1670, ANNEALED AT 3000°F (1649°C)
FOR 1 HOUR, TESTED AT 2600°F (1426°C), 1,500 PSI (1.03 x 10⁷ N/m²)

Time <u>Time</u>	Length Change L (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
1 Minute (s)	.00000	.000	7.6 x 10 ⁻⁸
2	.00000	.000	7.6 x 10 ⁻⁸
3	.00005	.002	7.6 x 10 ⁻⁸
4	.00005	.002	7.6 x 10 ⁻⁸
5	.00005	.002	7.6 x 10 ⁻⁸
6	.00005	.002	7.6 x 10 ⁻⁸
7	.00010	.005	7.6 x 10 ⁻⁸
8	.00010	.005	7.6 x 10 ⁻⁸
9	.00010	.005	7.6 x 10 ⁻⁸
10	.00010	.005	7.6 x 10 ⁻⁸
15	.00010	.005	7.6 x 10 ⁻⁸
30	.00010	.005	7.6 x 10 ⁻⁸
45	.00005	.002	7.6 x 10 ⁻⁸
60	.00010	.005	7.6 x 10 ⁻⁸
1.7 Hours	.00010	.005	5.9 x 10 ⁻⁸
17.5	.00160	.080	3.5 x 10 ⁻⁸
25.7	.00200	.100	3.5 x 10 ⁻⁸
89.5	.00515	.258	9.5 x 10 ⁻⁹
97.6	.00560	.280	9.0 x 10 ⁻⁹
113.7	.00655	.328	8.2 x 10 ⁻⁹
121.1	.00690	.345	8.0 x 10 ⁻⁹
137.7	.00720	.360	7.9 x 10 ⁻⁹
145.9	.00740	.370	7.8 x 10 ⁻⁹
161.8	.00820	.410	6.6 x 10 ⁻⁹
169.6	.00830	.415	6.0 x 10 ⁻⁹
185.6	.00880	.440	6.0 x 10 ⁻⁹
194.6	.00900	.450	6.0 x 10 ⁻⁹
213.8	.00960	.480	5.6 x 10 ⁻⁹
239.8	.00975	.488	3.4 x 10 ⁻⁹
260.4	.01005	.502	4.8 x 10 ⁻⁹
281.6	.01025	.512	4.6 x 10 ⁻⁹
289.9	.01045	.522	4.6 x 10 ⁻⁹
305.7	.01060	.530	4.8 x 10 ⁻⁹
329.4	.01080	.540	4.9 x 10 ⁻⁹
353.6	.01090	.545	4.7 x 10 ⁻⁹
361.9	.01105	.552	4.6 x 10 ⁻⁹
380.3	.01125	.562	4.5 x 10 ⁻⁹
407.2	.01140	.570	4.0 x 10 ⁻⁹
425.8	.01185	.592	4.2 x 10 ⁻⁹
449.6	.01225	.612	4.0 x 10 ⁻⁹
473.6	.01255	.628	4.0 x 10 ⁻⁹
481.7	.01265	.632	4.0 x 10 ⁻⁹

Test Terminated
Specimen S-25A

TRW EQUIPMENT LABORATORIES**TABLE XVII**

CREEP TEST DATA, T-111 SHEET, HEAT NO. 70616, ANNEALED 3000°F (1649°C) FOR 1 HOUR
TESTED AT 2200°F (1204°C), 8,000 PSI (5.52 x 10⁷N/m²)

Time	Length Change ΔL (inch) (2" G. L.)	Creep (%)	Pressure (Torr)
1 minute(s)	.00005	.002	2.6 x 10 ⁻⁹
2	.00010	.005	2.6 x 10 ⁻⁹
3	.00015	.008	2.6 x 10 ⁻⁹
4	.00010	.005	2.6 x 10 ⁻⁹
5	.00005	.002	2.6 x 10 ⁻⁹
6	.00005	.002	2.6 x 10 ⁻⁹
7	.00005	.002	2.6 x 10 ⁻⁹
8	.00000	.000	2.6 x 10 ⁻⁹
9	.00005	.002	2.6 x 10 ⁻⁹
10	.00005	.002	2.6 x 10 ⁻⁹
15	.00000	.000	2.6 x 10 ⁻⁹
30	.00010	.005	2.6 x 10 ⁻⁹
45	.00010	.005	2.6 x 10 ⁻⁹
60	.00005	.002	2.6 x 10 ⁻⁹
2.4 hours	.00005	.002	2.6 x 10 ⁻⁹
19.2	.00010	.005	2.0 x 10 ⁻⁹
43.1	.00010	.005	1.6 x 10 ⁻⁹
48.3	.00035	.018	1.6 x 10 ⁻⁹
67.1	.00060	.030	1.5 x 10 ⁻⁹
139.4	.00135	.068	1.4 x 10 ⁻⁹
163.0	.00155	.078	1.4 x 10 ⁻⁹
187.0	.00175	.088	1.2 x 10 ⁻⁹
211.3	.00190	.095	1.3 x 10 ⁻⁹
310.5	.00215	.108	1.2 x 10 ⁻⁹
383.3	.00245	.122	1.3 x 10 ⁻⁹
474.9	.00320	.160	1.3 x 10 ⁻⁹
499.3	.00370	.185	1.2 x 10 ⁻⁹
523.1	.00390	.195	1.3 x 10 ⁻⁹
547.6	.00405	.202	1.2 x 10 ⁻⁹
572.0	.00470	.235	1.3 x 10 ⁻⁹
643.8	.00530	.265	1.4 x 10 ⁻⁹
691.2	.00545	.272	1.3 x 10 ⁻⁹
714.9	.00560	.280	1.2 x 10 ⁻⁹
739.2	.00565	.282	1.2 x 10 ⁻⁹
811.1	.00625	.312	1.3 x 10 ⁻⁹
835.0	.00640	.320	1.2 x 10 ⁻⁹
859.1	.00655	.328	1.4 x 10 ⁻⁹
883.5	.00675	.338	1.3 x 10 ⁻⁹

TRW EQUIPMENT LABORATORIES

TABLE XVII (Continued)

Time	Length Change ΔL (inch) (2" G. L.)	Creep (%)	Pressure (Torr)
907.3 Hours	.00685	.342	1.3×10^{-9}
979.7	.00750	.375	1.3×10^{-9}
1051.4	.00835	.418	1.2×10^{-9}
1147.3	.00975	.488	1.3×10^{-9}
1219.0	.01050	.525	1.3×10^{-9}
1315.7	.01125	.562	1.1×10^{-9}
1387.2	.01150	.575	1.1×10^{-9}
1483.1	.01375	.688	8.3×10^{-9}
1555.3	.01410	.705	1.3×10^{-9}
1651.0	.01515	.758	7.0×10^{-10}
1723.4	.01615	.808	8.2×10^{-10}
1819.2	.01755	.878	9.0×10^{-10}
1890.9	.01830	.915	7.4×10^{-10}
1986.9	.01980	.990	7.9×10^{-10}
2059.0	.02080	1.040	8.3×10^{-10}
2154.8	.02230	1.115	7.0×10^{-10}
2227.1	.02315	1.158	6.9×10^{-10}
2323.1	.02445	1.222	7.5×10^{-10}
2395.0	.02580	1.290	7.0×10^{-10}
2490.8	.02700	1.350	7.2×10^{-10}
2563.3	.02780	1.390	7.0×10^{-10}
2659.6	.02970	1.485	7.3×10^{-10}
2734.4	.03080	1.540	7.4×10^{-10}
2827.3	.03205	1.602	6.6×10^{-10}
2900.0	.03320	1.660	6.5×10^{-10}
2923.0	.03345	1.672	6.7×10^{-10}
2995.6	.03505	1.752	6.5×10^{-10}
3018.9	.03530	1.765	6.6×10^{-10}
3043.2	.03560	1.780	6.6×10^{-10}
3072.1	.03670	1.835	6.6×10^{-10}
3091.1	.03635	1.818	6.8×10^{-10}
3162.9	.03745	1.872	6.5×10^{-10}
3186.2	.03750	1.875	6.4×10^{-10}
3210.1	.03820	1.910	6.5×10^{-10}
3234.1	.03910	1.955	6.8×10^{-10}
3258.5	.03940	1.970	6.8×10^{-10}
3330.3	.04025	2.012	6.4×10^{-10}
3354.0	.04050	2.025	6.6×10^{-10}
3378.7	.04085	2.042	6.6×10^{-10}
3402.3	.04120	2.060	6.4×10^{-10}
3426.0	.04155	2.078	6.4×10^{-10}
3498.0	.04300	2.150	6.6×10^{-10}
3522.0	.04320	2.160	6.7×10^{-10}
3546.0	.04350	2.175	7.0×10^{-10}
3569.0	.04420	2.210	6.6×10^{-10}
3594.3	.04465	2.232	6.2×10^{-10}
3666.3	.04585	2.292	7.0×10^{-10}

TRW EQUIPMENT LABORATORIES

TABLE XVII (Continued)

Time	Length Change ΔL(inch) (2" G.L.)	Creep (%)	Pressure (Torr)
3689.9 Hours	.04620	2.310	6.4×10^{-10}
3713.9	.04660	2.330	6.8×10^{-10}
3738.2	.04710	2.355	6.6×10^{-10}
3762.0	.04750	2.375	6.8×10^{-10}
3834.4	.04870	2.435	6.6×10^{-10}
3858.2	.04905	2.452	6.4×10^{-10}
3882.0	.04935	2.468	6.5×10^{-10}
3906.0	.04985	2.492	6.4×10^{-10}
3930.0	.05040	2.520	6.3×10^{-10}
4026.4	.05215	2.608	6.2×10^{-10}
4050.2	.05230	2.615	6.5×10^{-10}
4074.1	.05295	2.648	6.2×10^{-10}
4098.1	.05330	2.665	6.4×10^{-10}
4173.0	.05430	2.715	6.3×10^{-10}
4194.0	.05495	2.748	6.2×10^{-10}
4218.0	.05540	2.770	6.1×10^{-10}
4241.9	.05580	2.790	6.2×10^{-10}
4265.9	.05625	2.812	6.4×10^{-10}
4338.0	.05745	2.872	6.0×10^{-10}
4362.0	.05790	2.895	5.9×10^{-10}
4386.1	.05860	2.930	5.9×10^{-10}
4410.3	.05905	2.952	6.3×10^{-10}
4433.9	.05935	2.968	6.1×10^{-10}
4506.1	.06045	3.022	6.2×10^{-10}
4530.0	.06100	3.050	6.1×10^{-10}
4554.0	.06160	3.080	6.2×10^{-10}
4578.1	.06195	3.098	6.2×10^{-10}
4602.4	.06215	3.108	7.1×10^{-10}
4674.5	.06320	3.160	7.4×10^{-10}
4698.3	.06365	3.182	7.2×10^{-10}
4721.8	.06425	3.212	7.3×10^{-10}
4746.0	.06485	3.242	7.6×10^{-10}
4770.0	.06525	3.262	7.4×10^{-10}
4866.0	.06735	3.368	7.6×10^{-10}
4869.5	.06735	3.368	7.6×10^{-10}

Test Terminated - 3% Creep
Specimen S-19

TRW EQUIPMENT LABORATORIES

TABLE XVIII

CREEP TEST DATA T-111 SHEET, HEAT NO. T-111-D-1670, ANNEALED AT 3000°F (1649°C)
FOR 1 HOUR, TESTED AT 2600°F (1426°C) 500 PSI (3.44 x 10⁶ N/m²)

<u>Time</u>	<u>Length Change L (inch) (2" G. L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
1 Minute (s)	.00005	.002	2.6 x 10 ⁻⁸
2	.00005	.002	2.6 x 10 ⁻⁸
3	.00000	.000	2.6 x 10 ⁻⁸
4	.00005	.002	2.6 x 10 ⁻⁸
5	.00000	.000	2.6 x 10 ⁻⁸
6	.00005	.002	2.6 x 10 ⁻⁸
7	.00005	.002	2.6 x 10 ⁻⁸
8	.00005	.002	2.6 x 10 ⁻⁸
9	.00010	.005	2.6 x 10 ⁻⁸
10	.00005	.002	2.6 x 10 ⁻⁸
15	-.00005	-.002	2.6 x 10 ⁻⁸
30	-.00010	-.005	2.6 x 10 ⁻⁸
45	-.00010	-.005	2.6 x 10 ⁻⁸
60	-.00010	-.005	2.6 x 10 ⁻⁸
16.4 Hours	-.00010	-.005	1.6 x 10 ⁻⁸
40.4	.00005	.002	8.0 x 10 ⁻⁹
64.4	.00050	.025	8.4 x 10 ⁻⁹
83.3	.00075	.038	7.9 x 10 ⁻⁹
160.3	.00180	.090	5.5 x 10 ⁻⁹

Test in Progress
Specimen S-28

TRW EQUIPMENT LABORATORIES

TABLE XIX

CREEP TEST DATA, VAPOR DEPOSITED TUNGSTEN, RECRYSTALLIZED 1 HOUR 2800°F (1538°C)TESTED AT 2800°F (1538°C), 2000 PSI ($1.38 \times 10^7 \text{ N/m}^2$)

Time	Length Change ΔL (inch) (2" G. L.)	Creep (%)	Pressure (Torr)
1 minute(s)	.00020	.010	3.5×10^{-7}
2	.00025	.012	3.5×10^{-7}
3	.00025	.012	3.5×10^{-7}
4	.00025	.012	3.5×10^{-7}
5	.00025	.012	3.5×10^{-7}
6	.00030	.015	3.5×10^{-7}
7	.00040	.020	3.5×10^{-7}
8	.00035	.018	3.5×10^{-7}
9	.00010	.020	3.5×10^{-7}
10	.00035	.018	3.5×10^{-7}
15	.00000	.000	3.5×10^{-7}
30	-.00005	-.002	3.5×10^{-7}
45	.00000	.000	3.5×10^{-7}
60	-.00005	-.002	3.5×10^{-7}
64.9 hours	.00175	.088	8.0×10^{-8}
88.9	.00210	.105	6.4×10^{-8}
112.8	.00260	.130	4.6×10^{-8}
136.7	.00310	.155	4.1×10^{-8}
161.0	.00370	.185	3.8×10^{-8}
232.8	.00180	.210	3.4×10^{-8}
256.8	.00525	.262	3.1×10^{-8}
280.8	.00550	.275	2.9×10^{-8}
304.8	.00570	.285	2.7×10^{-8}
328.7	.00635	.318	2.6×10^{-8}
400.8	.00750	.375	1.6×10^{-8}
425.0	.00760	.380	1.3×10^{-8}
448.6	.00775	.388	7.8×10^{-9}
472.8	.00795	.398	6.3×10^{-9}
496.8	.00830	.415	5.6×10^{-9}
568.7	.00930	.465	5.0×10^{-9}
600.1	.00990	.495	1.1×10^{-9}
616.7	.01040	.520	1.2×10^{-8}
641.1	.01015	.508	1.1×10^{-8}
661.7	.00980	.490	1.0×10^{-8}
736.8	.01150	.575	9.9×10^{-9}
760.7	.01190	.595	8.6×10^{-9}
784.7	.01310	.655	9.7×10^{-9}

TRW EQUIPMENT LABORATORIES

TABLE XIX (Continued).

Time	Length Change ΔL (inch) (2" G.L.)	Creep (%)	Pressure (Torr)
808.5 Hours	.01235	.618	9.4 x 10 ⁻⁹
832.5	.01270	.635	9.4 x 10 ⁻⁹
904.5	.01350	.675	9.2 x 10 ⁻⁹
929.4	.01370	.685	8.6 x 10 ⁻⁹
952.6	.01410	.705	8.5 x 10 ⁻⁹
976.8	.01445	.722	7.0 x 10 ⁻⁹
1001.8	.01460	.730	8.2 x 10 ⁻⁹
1072.5	.01540	.770	8.0 x 10 ⁻⁹
1144.8	.01660	.830	7.8 x 10 ⁻⁹
1240.7	.01775	.888	7.8 x 10 ⁻⁹
1312.7	.01830	.915	5.6 x 10 ⁻⁹
1408.5	.01925	.962	5.0 x 10 ⁻⁹
1480.7	.01960	.980	4.0 x 10 ⁻⁹
1577.3	.02150	1.075	4.0 x 10 ⁻⁹
1652.0	.02190	1.095	4.2 x 10 ⁻⁹
1744.9	.02265	1.132	2.7 x 10 ⁻⁹
1817.7	.02295	1.148	3.6 x 10 ⁻⁹
1912.9	.02475	1.238	3.8 x 10 ⁻⁹
1989.8	.02630	1.315	3.1 x 10 ⁻⁹
2079.7	.02660	1.330	2.3 x 10 ⁻⁹
2151.8	.02835	1.418	3.8 x 10 ⁻⁹
2247.6	.02825	1.412	3.4 x 10 ⁻⁹
2319.8	.02925	1.462	2.8 x 10 ⁻⁹
2415.7	.03100	1.550	2.6 x 10 ⁻⁹
2487.6	.03110	1.555	3.5 x 10 ⁻⁹
2584.0	.03135	1.568	3.0 x 10 ⁻⁹
2655.7	.03265	1.632	2.6 x 10 ⁻⁹
2752.0	.03315	1.658	2.6 x 10 ⁻⁹
2823.7	.03380	1.690	2.3 x 10 ⁻⁹
2944.2	.03465	1.732	2.2 x 10 ⁻⁹
2991.7	.03580	1.790	2.0 x 10 ⁻⁹
3099.2	.03665	1.832	2.1 x 10 ⁻⁹
3159.4	.03785	1.892	1.8 x 10 ⁻⁹
3183.4	.03815	1.908	1.6 x 10 ⁻⁹
3255.5	.03785	1.892	2.0 x 10 ⁻⁹
3327.9	.03905	1.952	2.1 x 10 ⁻⁹
3423.6	.3975	1.988	1.8 x 10 ⁻⁹
3495.7	.04005	2.002	1.8 x 10 ⁻⁹

TRW EQUIPMENT LABORATORIES

TABLE XIX (Continued)

<u>Time</u>	<u>Length Change L (inch) (2" G.L.)</u>	<u>Creep (%)</u>	<u>Pressure (Torr)</u>
3591.9 Hours	.04145	2.072	1.9×10^{-9}
3663.6	.04180	2.090	1.9×10^{-9}
3783.6	.04345	2.172	1.7×10^{-9}
3832.2	.04445	2.222	1.8×10^{-9}
3927.7	.04495	2.248	1.5×10^{-9}
4008.7	.04615	2.308	1.6×10^{-9}
4095.4	.04690	2.345	1.8×10^{-9}
4171.2	.04735	2.368	1.6×10^{-9}
4263.9	.04860	2.430	1.4×10^{-9}
4335.4	.04895	2.448	1.4×10^{-9}
4431.8	.04930	2.465	1.7×10^{-9}
4504.0	.05095	2.548	1.6×10^{-9}
4599.6	.05065	2.532	1.6×10^{-9}
4671.2	.05230	2.615	1.6×10^{-9}
4767.5	.05400	2.700	1.6×10^{-9}
4839.3	.05415	2.706	1.4×10^{-9}
4936.2	.05525	2.762	1.3×10^{-9}
5007.5	.05600	2.800	1.5×10^{-9}
5103.3	.05740	2.870	1.5×10^{-9}
5296.0	.05865	2.932	1.4×10^{-9}
5343.1	.05915	2.958	1.3×10^{-9}
5439.6	.06010	3.005	1.4×10^{-9}
5511.2	.06125	3.062	2.0×10^{-9}
5679.6	.06255	3.128	1.3×10^{-9}
5775.4	.06425	3.212	1.3×10^{-9}

Test in Progress
Specimen B-24

TRW EQUIPMENT LABORATORIES

Thermo Electron Engineering Corp.
85 First Avenue
Waltham, Massachusetts
Attn: George Hatsopoulos

Sandia Corporation
Division 9333
P. O. Box 5800
Albuquerque, New Mexico 87115
Attn: James Jacobs

RCA
Electron Tube Division
New Holland Avenue
Lancaster, Pennsylvania
Attn: Fred Black

TRW EQUIPMENT LABORATORIES

Cleveland, Ohio 44135

Attn: Librarian

Dr. Bernard Lubarsky (SPSD) MS 86-1
Roger Mather (NPTB)
G. M. Ault MS 105-1
Joe Joyce (NPTB) MS 86-5
Paul Moorhead (NPTB)
John Creagh MS 86-5
John E. Dilley (SPSPS) MS 85-1
Norman T. Musial MS 77-1
Thomas Strom MS 5-8
T. A. Moss (NPTB) MS 86-5
Dr. Louis Rosenblum (MSD) (106-1)
R. Titran MS 105-1
R. Hall MS 105-1
George Tulisiak MS 14-1
J. J. Ward MS 500-309

National Aeronautics and Space Administration

Western Operations Office

150 Pico Boulevard

Santa Monica, California 90406

Attn: Mr. John Keeler

National Bureau of Standards

Washington 25, D. C.

Attn: Librarian

Aeronautical Systems Division

Wright-Patterson Air Force Base, Ohio

Attn: Charles Armbruster (ASRPP-10)

T. Cooper

Librarian

John L. Morris

H. J. Middendorp ASN RG 33143

Army Ordnance Frankford Arsenal

Bridesburg Station

Philadelphia 37, Pennsylvania

Attn: Librarian

TRW EQUIPMENT LABORATORIES

U. S. Atomic Energy Commission
Germantown, Maryland
Attn: Col. E. L. Douthett
SNAP 50/SPUR Project Office
Attn: H. Rochen
SNAP 50/SPUR Project Office
Attn: Socrates Christofer
Attn: Major Gordon Dicker
SNAP 50/SPUR Project Office

U. S. Atomic Energy Commission
Technical Information Service Extension
P. O. Box 62
Oak Ridge, Tennessee

3 copies

U. S. Atomic Energy Commission
Washington 25, D. C.
Attn: M. J. Whitman

Argonne National Laboratory
9700 South Cross Avenue
Argonne, Illinois
Attn: Librarian

Brookhaven National Laboratory
Upton Long Island, New York
Attn: Librarian

Oak Ridge National Laboratory
Oak Ridge, Tennessee
Attn: Dr. W. O. Harms
Attn: Dr. A. J. Miller
Attn: Librarian

Office of Naval Research
Power Division
Washington 25, D. C.
Attn: Librarian

Vought Astronautics
P. O. Box 5907
Dallas 22, Texas
Attn: Librarian

TRW EQUIPMENT LABORATORIES

Union Carbide Metals
Niagara Falls, New York
Attn: Librarian

Union Carbide Stellite Corporation
Kokomo, Indiana
Attn: Librarian

Union Carbide Nuclear Company
P. O. Box X
Oak Ridge, Tennessee
Attn: X-10 Laboratory Records Department

2 copies

United Nuclear Corporation
5 New Street
White Plains, New York
Attn: Librarian
Attn: Mr. Albert Weinstein,
Sr. Engineer

Universal Cyclops Steel Corporation
Refractomet Division
Bridgeville, Pennsylvania
Attn: C. P. Mueller

University of Michigan
Department of Chemical and Metallurgical Eng.
Ann Arbor, Michigan
Attn: Librarian

U. S. Atomic Energy Commission
Technical Reports Library
Washington 25, D. C.
Attn: J. M. O'Leary

University of California
Lawrence Radiation Laboratory
Technical Information Division
P. O. Box 808
Livermore, California 94551

TRW EQUIPMENT LABORATORIES

Ultek Corporation
Kingston Building, Rm. 211
1373 Grandview Avenue
Columbus, Ohio
Attn: Bruce Weber

General Electric Company
Materials Applied Research
Materials Development Laboratory
Mail Zone M78
Evendale, Ohio
Attn: W. H. Chang

R. C. A.
Astron-Electronics Division
Post Office Box 500
Princeton, New Jersey
Attn: Librarian, Mr. Fred Meigs

Dr. Alan Lawley
Franklin Institute
Philadelphia 3, Pennsylvania

L. J. Goetz
General Electric Co.
Refractory Metals Plant
21801 Tungsten Road
Cleveland, Ohio 44117

TRW EQUIPMENT LABORATORIES

Pratt & Whitney Aircraft
Materials Development Laboratory
P.O. Box 611
Middletown, Connecticut
Attn: Librarian

RCA
Defense Electronics Products
Astro-Electronics Division
Princeton, New Jersey
Attn: S. H. Winkler

Lawrence Radiation Lab
Technical Information Division
Livermore, California 94550
Attn: W. Blake Myers

General Electric Company
Nuclear Materials & Propulsion Operation
P. O. Box 132
Cincinnati, Ohio 45215
Attn: J. W. Stephenson (2 copies)

Dr. James Hadley
Head, Reactor Division
Lawrence Radiation Laboratory
P.O. Box 808
Livermore, California

H. F. Conrad
Process and Materials Division
Chemistry Department
Lawrence Radiation Laboratory
P.O. Box 808
Livermore, California

Matthew King
TRW SYSTEMS INC.
1 Space Park
Redondo Beach, California

ATTN: Nuclear Technology Dept.

TRW EQUIPMENT LABORATORIES

Republic Aviation Corporation
Farmingdale, Long Island, New York
Attn: Librarian

Solar
2200 Pacific Highway
San Diego 12, California
Attn: Frank Hill
Manager
Aerospace Sales

Southwest Research Institute
8500 Culebra Road
San Antonio 6, Texas
Attn: Librarian

Rocketdyne
Canoga Park, California
Attn: Librarian

Superior Tube Company
Norristown, Pennsylvania
Attn: Mr. A. Bound

Sylvania Electric Products, Inc.
Chemical and Metallurgical
Towanda, Pennsylvania
Attn: Librarian

Temescal Metallurgical
Berkeley, California
Attn: Librarian

Union Carbide Corporation
Parma Research Center
Technical Information Service
P. O. Box 6116
Cleveland, Ohio 44101

TRW EQUIPMENT LABORATORIES

Martin Marietta Corporation
Metals Technology Laboratory
Wheeling, Illinois

Massachusetts Institute of Technology
Cambridge 39, Massachusetts
Attn: Librarian

Materials Research and Development
Manlabs, Inc.
21 Erie Street
Cambridge 39, Massachusetts

Materials Research Corporation
Orangeburg, New York
Attn: Librarian

McDonnell Aircraft
St. Louis, Missouri
Attn: Librarian

MSA Research Corporation
Callery, Pennsylvania
Attn: Librarian

National Research Corporation
70 Memorial Drive
Cambridge 42, Massachusetts
Attn: Librarian

North American Aviation
Los Angeles Division
Los Angeles 9, California
Attn: Librarian

Norton Company
Worcester, Massachusetts
Attn: Librarian

Pratt & Whitney Aircraft
400 Main Street
East Hartford 8, Connecticut
Attn: Librarian

TRW EQUIPMENT LABORATORIES

Bureau of Ships
Department of the Navy
Washington 25, D. C.
Attn: Librarian

Bureau of Weapons
Research and Engineering
Material Division
Washington 25, D. C.
Attn: Librarian

U. S. Naval Research Laboratory
Washington 25, D. C.
Attn: Librarian

Advanced Technology Laboratories
Division of American Standard
369 Whisman Road
Mountain View, California
Attn: Librarian

Aerojet General Nucleonics
P. O. Box 77
San Ramon, California
Attn: Librarian

AiResearch Manufacturing Company
Sky Harbor Airport
402 South 36th Street
Phoenix, Arizona
Attn: Librarian
E. A. Kovacevich

AiResearch Manufacturing Company
9851-9951 Sepulveda Boulevard
Los Angeles 45, California
Attn: Librarian

TRW EQUIPMENT LABORATORIES

Ford Motor Company
Aeronutronics
Newport Beach, California
Attn: Librarian

General Atomic
John Jay Hopkins Laboratory
P. O. Box 608
San Diego 12, California
Attn: Librarian

General Electric Company
Atomic Power Equipment Division
P. O. Box 1131
San Jose, California

General Electric Company
Missile and Space Vehicle Dept.
3198 Chestnut Street
Philadelphia 4, Pennsylvania

General Electric Company
Vallecitos Atomic Laboratory
Pleasanton, California
Attn: Librarian

General Electric Company
Ervendale, Ohio 45215
FPD Technical Information Center
Bldg. 100, Mail Drop F-22

General Electric Company
Reentry Systems Dept.
Cincinnati, Ohio 45215
Attn: Dr. J. W. Semmel 2 copies
 E. E. Hoffman

Mr. R. M. Hanschka
Materials Engineering
Hamilton Standard
Windsor Locks, Connecticut

TRW EQUIPMENT LABORATORIES

Chance Vought Aircraft Inc.
P. O. Box 5907
Dallas 22, Texas
Attn: Librarian

Clevite Corporation
Mechanical Research Division
540 East 105th Street
Cleveland 8, Ohio
Attn: Mr. N. C. Beerli,
Project Administrator

Climax Molybdenum Company of Michigan
Detroit, Michigan
Attn: Librarian

Convair Astronautics
5001 Kerrny Villa Road
San Diego 11, California
Attn: Librarian

Curtiss-Wright Corporation
Research Division
Tuehanna, Pennsylvania
Attn: Librarian

E. I. dePont de Nemours and Company, Inc.
Wilmington 98, Delaware
Attn: W. E. Lusby, Jr.
Defense Contracts Supervisor

Electro-Optical Systems, Incorporated
Advanced Power Systems Division
Pasadena, California
Attn: Librarian

Fansteel Metallurgical Corporation
North Chicago, Illinois
Attn: Librarian
Attn: Henry L. Kohn

TRW EQUIPMENT LABORATORIES

General Dynamics/Fort Worth
P. O. Box 748
Fort Worth, Texas
Attn: Librarian

General Motors Corporation
Allison Division
Indianapolis 6, Indiana
Attn: Librarian

Hamilton Standard
Division of United Aircraft Corporation
Windsor Locks, Connecticut
Attn: Librarian

Hughes Aircraft Company
Engineering Division
Culver City, California
Attn: Librarian

Lockheed Missiles and Space Division
Lockheed Aircraft Corporation
Sunnyvale, California
Attn: Librarian

Marquardt Aircraft Company
P. O. Box 2013
Van Nuys, California
Attn: Librarian

The Martin Company
Baltimore 3, Maryland
Attn: Librarian

The Martin Company
Nuclear Division
P. O. Box 5042
Baltimore 20, Maryland
Attn: Librarian

TRW EQUIPMENT LABORATORIES

Wah Chang Corporation
Albany, Oregon
Attn: Librarian
Attn: S. Worcester

Westinghouse Electric Corporation
Astronuclear Laboratory
P. O. Box 10864
Pittsburgh, Pennsylvania 15236
Attn: R. Begley

Westinghouse Electric Corporation
Materials Manufacturing Division
RD No. 2 Box 25
Blairsville, Pennsylvania
Attn: Librarian
Attn: F. L. Orrell

Wolverine Tube Division
Calumet and Hecla, Inc.
17200 Southfield Road
Allen Park, Michigan
Attn: Mr. Eugene F. Hill

Wyman-Gordon Company
North Grafton, Massachusetts
Attn: Librarian

Westinghouse Electric
Aerospace Electrical Division
Lima, Ohio
Attn: Paul Kueser

Air Force Materials Laboratory
Research and Technology Division
Wright-Patterson Air Force Base, Ohio 45433
Attn: C. L. Harmsworth

Johns Hopkins University
Applied Physics Laboratory
8621 Sergia Avenue
Silver Spring, Maryland
Attn: Librarian

TRW EQUIPMENT LABORATORIES

Wah Chang Corporation
Albany, Oregon
Attn: Librarian
Attn: S. Worcester

Westinghouse Electric Corporation
Astronuclear Laboratory
P. O. Box 10864
Pittsburgh, Pennsylvania 15236
Attn: R. Begley

Westinghouse Electric Corporation
Materials Manufacturing Division
RD No. 2 Box 25
Blairsville, Pennsylvania
Attn: Librarian
Attn: F. L. Orrell

Wolverine Tube Division
Calumet and Hecla, Inc.
17200 Southfield Road
Allen Park, Michigan
Attn: Mr. Eugene F. Hill

Wyman-Gordon Company
North Grafton, Massachusetts
Attn: Librarian

Westinghouse Electric
Aerospace Electrical Division
Lima, Ohio
Attn: Paul Kueser

Air Force Materials Laboratory
Research and Technology Division
Wright-Patterson Air Force Base, Ohio 45433
Attn: C. L. Harmsworth

Johns Hopkins University
Applied Physics Laboratory
8621 Sergia Avenue
Silver Spring, Maryland
Attn: Librarian

TRW EQUIPMENT LABORATORIES

EXTERNAL DISTRIBUTION

National Aeronautics and Space Administration
Washington, D. C. 20546
Attn: Walter C. Scott
Attn: James J. Lynch (RN)
Attn: George C. Deutsch (RR)

National Aeronautics and Space Administration
Scientific and Technical Information Facility
Box 5700
Bethesda, Maryland 21811

2 copies + 2 reproducible

National Aeronautics and Space Administration
Ames Research Center
Moffet Field, California 94035
Attn: Librarian

National Aeronautics and Space Administration
Goddard Space Flight Center
Greenbelt, Maryland 20771
Attn: Librarian

National Aeronautics and Space Administration
Langley Research Center
Hampton, Virginia 23365
Attn: Librarian

National Aeronautics and Space Administration
Manned Spacecraft Center
Houston, Texas 77001
Attn: Librarian

National Aeronautics and Space Administration
George C. Marshall Space Flight Center
Huntsville, Alabama 35812
Attn: Librarian

National Aeronautics and Space Administration
Jet Propulsion Laboratory
4800 Oak Grove Drive
Pasadena, California 91103
Attn: Librarian